


MODEL 163.113 /128

- 1 Noise encapsulation, front section
- 2 Headless setscrew
- 3 Plastic clip
- 4 Noise encapsulation, center section
- 5 Noise encapsulation, rear section

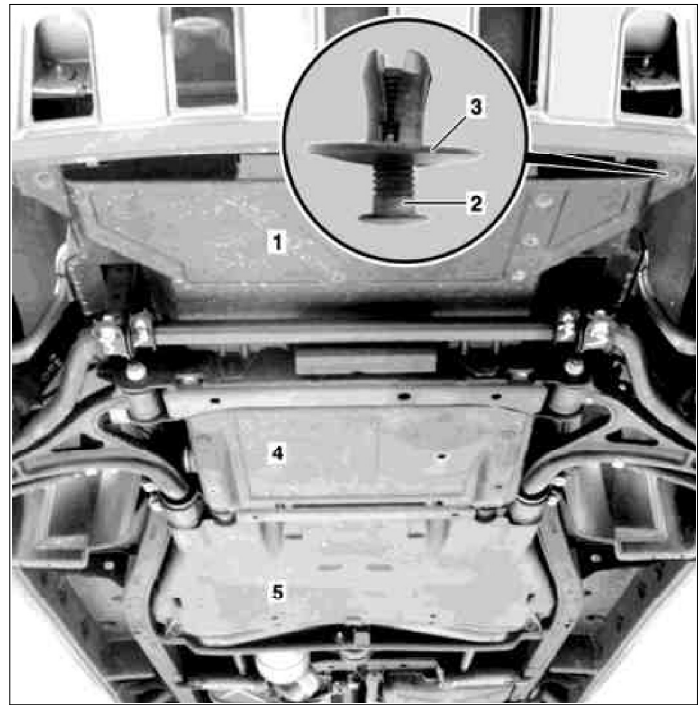

P94.30-2011-12

☒ ☒	Remove, install		
🔧 Installation	Inspect headless setscrews and plastic clips, replace if necessary.		
1	Remove headless setscrews (2) and plastic clips (3) from noise encapsulation front section (4)	i 6 headless setscrews and plastic clips.	
2	Remove noise encapsulation front section (1)		
3	Remove headless setscrews (2) and plastic clips (3) from noise encapsulation center section (4)	i 4 headless setscrews and plastic clips.	
4	Remove (4) noise encapsulation center section		
5	Remove headless setscrews (2) and plastic clips (3) from noise encapsulation rear section (5)	i 8 headless setscrews and plastic clips.	
6	Remove noise encapsulation rear section (5)		
7	Install in reverse order		