


MODEL 163.174

- 1 Spare wheel cover front section
- 2 Retaining straps
- 3 Electric air pump
- 4 Screws
- 5 Spare wheel mount
- 6 Bracket
- 7 Screws

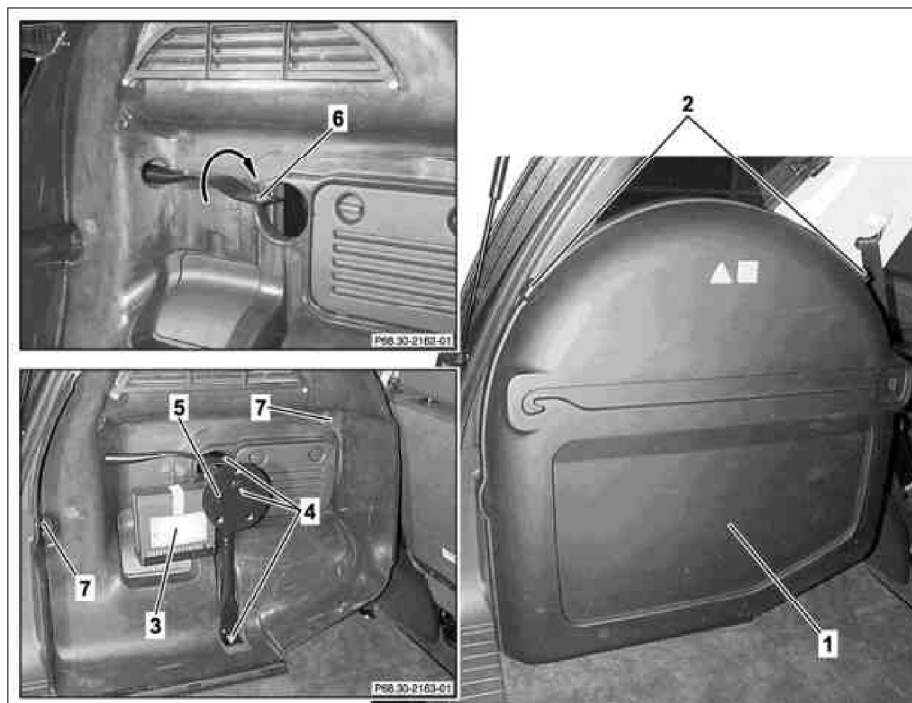

P68.30-2161-06

| | Removal, installation | | |
|---|--|---|---------------------|
| 1 | Remove cargo space cover | See Owner's Manual. | |
| 2 | Loosen retaining straps (2) and remove spare wheel cover front section (1) | | |
| 3 | Remove spare wheel | | *BA40.10-P-1002-01A |
| 4 | Remove electric air pump (3) | | |
| 5 | Unscrew screws (4) and remove spare wheel mount (5) | | |
| 6 | Remove bracket (6) | Turn in clockwise direction until bracket (6) releases at D-pillar. | |
| 7 | Remove rear wall on spare wheel cover | 2 screws. | |
| 8 | Install in opposite order | | |

Wheels

| Number | Designation | Model 163.174 |
|--------------------|---|------------------|
| BA40.10-P-1002-01A | Bolt for spare wheel on inside of spare wheel mount | 50 |