

The trip computer control module (TRIP, N41) consists of the following components:

- |   |                                   |   |  |
|---|-----------------------------------|---|--|
| D | Electronics unit                  | D | Glass breakage sensor (N41b2)                                |
| D | LCD display                       | D | CAN interface  |
| D | Reset button (left button, N41s1) | D | Alarm bus to all activity module (AAM, N10)                  |
| D | Mode button (right button, N41s2) | D | as of 1.9.00: Interface (RS 485) to electronic compass (B26) |
| D | Inclination sensor (N41b1)        |   |  |