
AF72.10-P-6003-01A	Adjusting front door lock		
--------------------	---------------------------	--	--

Nm Front door


Number	Designation	Model 163
BA72.10-P-1004-01D	Screw on door lock Nm	8

- 1 Remove plug for adjustment screw on front door lock
- 2 Press door handle inward and remove adjustment screw (1) on door lock. Do not remove tool.
- (3) Note that door lock in right front door has left-hand thread.

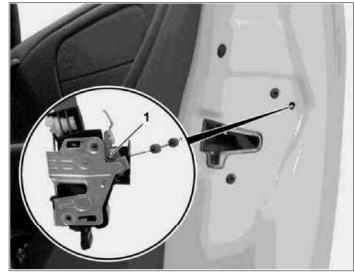


P72.10-2031-11

- 3 Pull door handle outward approx. 1 mm and hold in this position
- 4 Press adjustment screw in direction of door inner paneling with attached tool and tighten
- 5 Release door handle
- 6 Observe motion of adjustment screw through access hole while pulling door handle outward
- $\fbox{\ \ \ }$ Door handle should have 1-2 mm of play (a) before the adjustment screw moves.

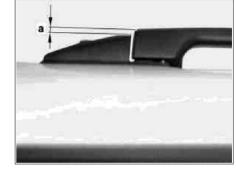

P72.10-2032-01

- i The lock opens when the door handle is pulled out approx. 15 mm (b).
- 7 Reinstall plug for adjustment screw on door lock

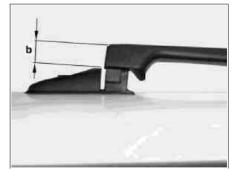

P72.10-2033-01