


MODEL 163

1 Screw

2 Connector

M21/1 Left electrically adjustable and heated exterior rearview mirror

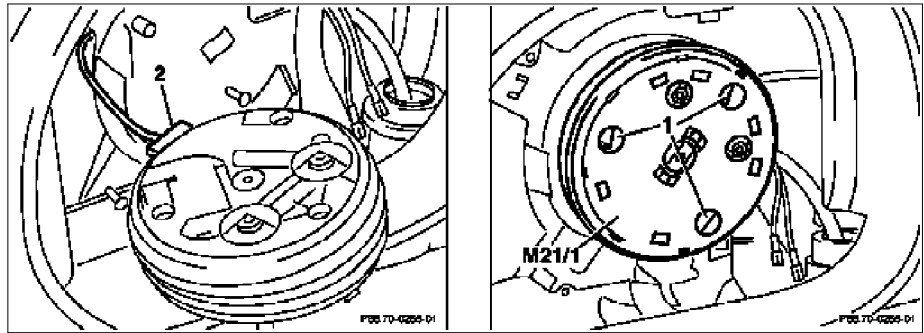


M21/2 Right electrically adjustable and heated exterior rearview mirror (not illustrated)



P88.70-0256-04

Operation no. of operation texts or of standard texts and flat rates

Division	Operation no.	Operation text
P	883476	REPLACING MOTOR FOR LEFT ELECTRICALLY ADJUSTABLE EXTERIOR REARVIEW MIRROR
P	883478	REPLACING MOTOR FOR RIGHT ELECTRICALLY ADJUSTABLE EXTERIOR REARVIEW MIRROR

 	Removal, installation		
1	Remove covering on outside rearview mirror	 Remove mirror housing covering only.	AR88.70-P-9040GH
2	Unscrew screw (1)		
3	Disconnect connector (2) and remove mirror adjustment motor (M21/1 or M21/2)		
4	Install in opposite order		