


MODEL 163.136 /154 /172 #A up to 145272

- 1 Glove compartment lid
 2 Instrument panel
 3 Screws
 4 Striker eye
 5 Hinge screw
 6 Hinge
 Arrows Air gap and adjustment possibilities on hinge

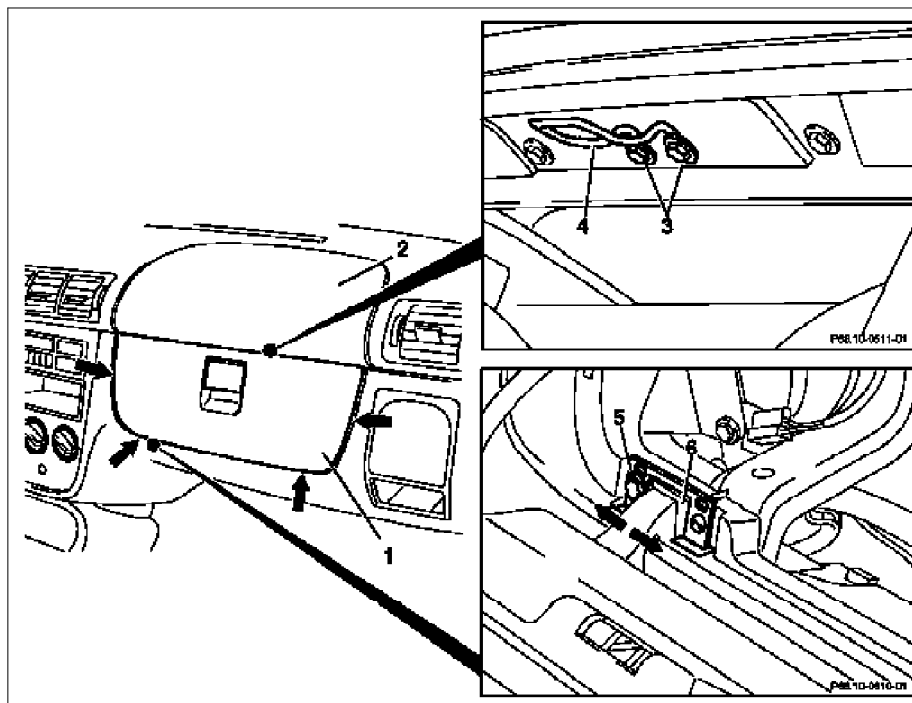

P68.10-0517-06

	Adjusting		
i	During entire operation pay attention to uniform transition, gap and adjustment possibilities on hinge (arrows) between glove compartment lid (1) and instrument panel (2).		
1	Loosen screws (3) on striker eye (4)	i Installation: Adjust transition at top of striker eye (4).Glove compartment lid (1) should make slight contact to stop buffers.	
2	Remove glove compartment		AR68.10-P-1400GH
3	Adjust gap	i For this purpose loosen hinge screw (5) from hinge (6).	
4	Install glove compartment		AR68.10-P-1400GH
5	Check for easy motion and proper function		