


 





 


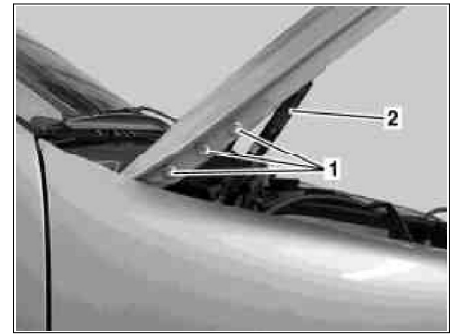


MODEL 163.113 /128 /136 /154 /157 /172 /174 /175

- 1 Screws
2 Gas pressure strut



P88.40-2062-01

	Removing and installing		
 Danger!	Risk of injury to fingers being jammed or squeezed when removing and installing or aligning hoods, doors, trunk lid/taillgate or sliding roof.	When moving components, ensure that no body parts or limbs are within the operating range of moving parts.	AS00.00-Z-0011-01A
1	Open engine hood and raise to vertical position	 Up to VIN A145272, X708318.  As of VIN A145273, X708319.	AR88.40-P-1000GH AR88.40-P-1000GI
2	Mark position of engine hood hinges on engine hood	 Facilitates installation.	
3.1	Remove gas strut (2)	 Secure engine hood with helper to avoid damage.  As of VIN A145273, X708319.	AR88.40-P-3010GH
4	Remove screws (1)	 Installation: Paint screws. 	*BA88.40-P-1001-01C
5	Remove engine hood	 Use helper to avoid damage. Set down on suitable surface.	
6	Install in the reverse order	 Align engine hood on engine hood hinges at markings made previously.	
7	Check alignment of engine hood	 If necessary: #	
		Adjust engine hood	AR88.40-P-3020GH

 **Engine hood**

Number	Designation		Model 163
BA88.40-P-1001-01C	Screw for engine hood hinge on engine hood	Nm	10