


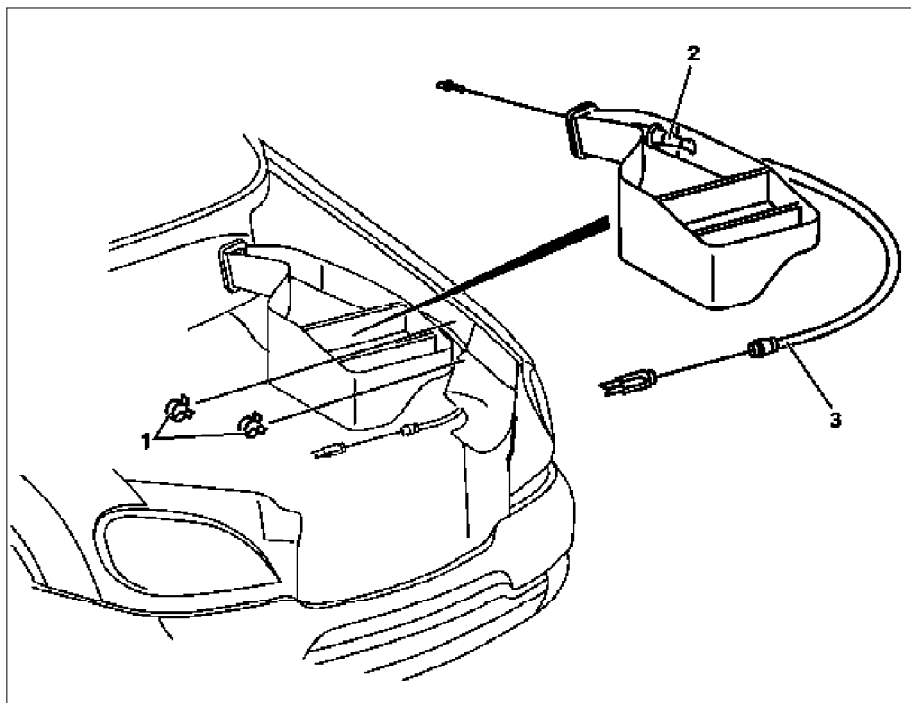


MODEL 163.113 /128 /136 /154 /157 /172 /174 /175

Illustrated up to VIN A145272, X708318

- 1 Clips
- 2 Rubber grommet
- 3 Engine hood control cable



P88.40-2140-06

	Removing and installing		
1	Open engine hood and raise to vertical position	Up to VIN A145272, X708318. As of VIN A145273, X708319.	AR88.40-P-1000GH AR88.40-P-1000GI
2.1	Remove upper frame cross member	Only up to VIN A145272, X708318	AR62.30-P-2300GH
2.2	Remove engine hood lock	Only as of VIN A145273, X708319.	AR88.40-P-3200GI
3.1	Unhook engine hood control cable from clip at bottom of radiator cross member	Only as of VIN A145273, X708319.	
4	Remove cover from fuse and relay box	 5 screws.	
5	Unhook clips (1) from body		
6	Remove left cover below instrument panel	Left hand drive vehicle. Vehicles with right-hand steering up to VIN A145272, X708318. Vehicles with right-hand steering as of VIN A145273, X708319.	AR68.10-P-1500GH AR68.10-P-1520GH AR68.10-P-1520GI
7	Remove paneling in left footwell		AR68.30-P-4010GH
8	Unhook engine hood control cable at side at clip in footwell		
9	Remove rubber grommet (2) from fuse and relay box		
10	Pull out engine hood control cable (3) through firewall on engine side and remove	 Installation: Ensure that engine hood control cable is routed cleanly along fuse and relay box.	
11	Install in the reverse order		