463.200 /204 /206 /207 /208 /209 /220 /221 /224 /225 /227 /228 /230 /231 /232 /233 /240 /241 /243 /244 /245 /246

/247 /248 /249 /250 /254 /300 /304 /307 /308 /309 /320 /321 /322 /323 /324 /325 /327 /328 /330 /331 /332 /333

with CODE (ER5) MB "Classic" radio or standard class stereo cassette radio with CODE (ER6) MB "Special" radio or mid-class stereo cassette radio with CODE (ER7) MB "Exquisit" radio or comfort class stereo cassette radio

MODEL 414,700

> with CODE (EF8) Sound 10 radio with CODE (EF9) Sound 20 radio with CODE (EG5) Sound 30 radio


with CODE (EG6) Audio 10 comfort radio, D2B networked with CODE (EU0) Sound 30 radio with single CD drive

with CODE (EF2) Audio 10 RDS with CD insertion slot

The figure shows removal of radio in model 202

51 Removal assembly

A2 Radio

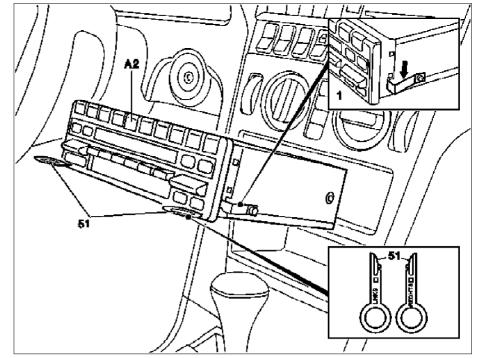

P82.60-0001-06

XX	Remove/Install		
1	Disconnect battery ground cable	On model 163, 210, insulate cable terminal for ground lead to prevent unintentional contact between disconnected ground lead and ground point W10	AR54.10-P-0003A
		Model 463 except 463.241 with code 979	AR54.10-P-0003G
		Model 463.241 with code 979	AR54.10-P-0003PV
2	Pull out radio (A2)	insert removal fixture (51) for this purpose.	*000589886300
		Push back retaining springs (arrow) on	
		removed radio (A2) and pull out removal fixture (51).	
k	MB radio	Model 202	BT82.60-P-9309-01A
k	MB radio	as of 02/97	BT82.60-P-9309-01B
k	MB radio	MODEL 129 as of 02/91	BT82.60-P-9309-01C
3	Disconnect electrical connectors		
4	Install in the reverse order		
5	Enter radio code	Code 750, 751	AR82.60-P-7502-01A
		Code 510a, 512a, 515a, 516a, 755, ER5,	AR82.60-P-7502-01B
		ER6, ER7	
		Model 129	AR82.60-P-7502-01C
		Model 168, 414	AR82.60-P-7502-01GC
		Model 163	AR82.60-P-7502-01GH

