


MODEL 163.113 /128

- 1 Noise encapsulation, front section
- 2 Headless setscrew
- 3 Plastic clip
- 4 Noise encapsulation, center section
- 5 Noise encapsulation, rear section

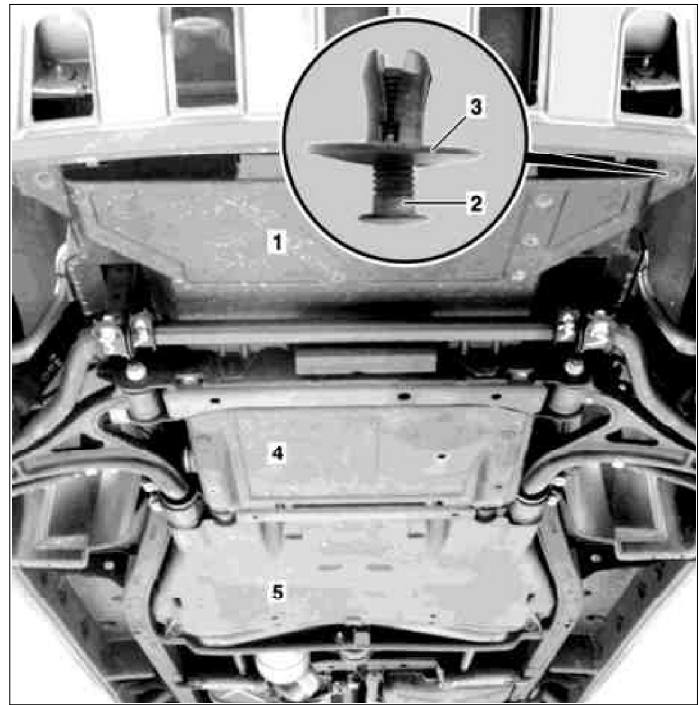

P94.30-2011-12

| ☒ ☒ | Remove, install | | |
|-----------------------|---|---|--|
| 🔧 Installation | Inspect headless setscrews and plastic clips, replace if necessary. | | |
| 1 | Remove headless setscrews (2) and plastic clips (3) from noise encapsulation front section (4) | i 6 headless setscrews and plastic clips. | |
| 2 | Remove noise encapsulation front section (1) | | |
| 3 | Remove headless setscrews (2) and plastic clips (3) from noise encapsulation center section (4) | i 4 headless setscrews and plastic clips. | |
| 4 | Remove (4) noise encapsulation center section | | |
| 5 | Remove headless setscrews (2) and plastic clips (3) from noise encapsulation rear section (5) | i 8 headless setscrews and plastic clips. | |
| 6 | Remove noise encapsulation rear section (5) | | |
| 7 | Install in reverse order | | |