


ⓘ For removal and installation, move selector lever or range selector lever to position "P" and, with control cable / gears removed, leave in position "P".

Removing

- 1 Turn cable/transmission (80) on transmission counterclockwise and remove.

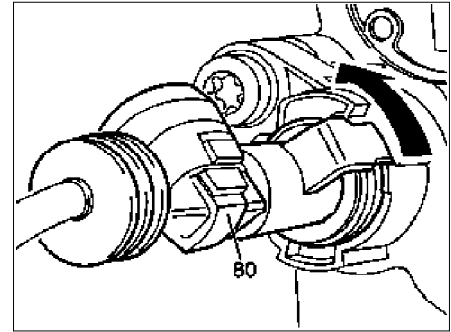


P27.60-0275-01

Installation

- 2 Install cable/transmission (80) and turn clockwise.

ⓘ After installation, adjust cable for parking shift lock and check for proper operation.

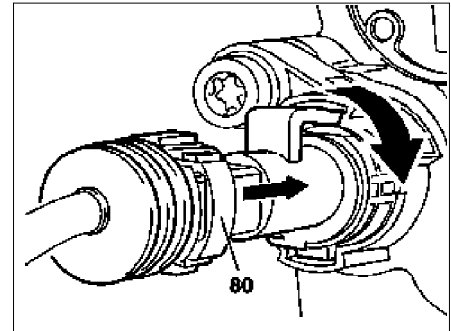

P27.60-0276-01