


The blower (M2) is below the instrument panel to the bottom right of the heater box/evaporator housing (3).

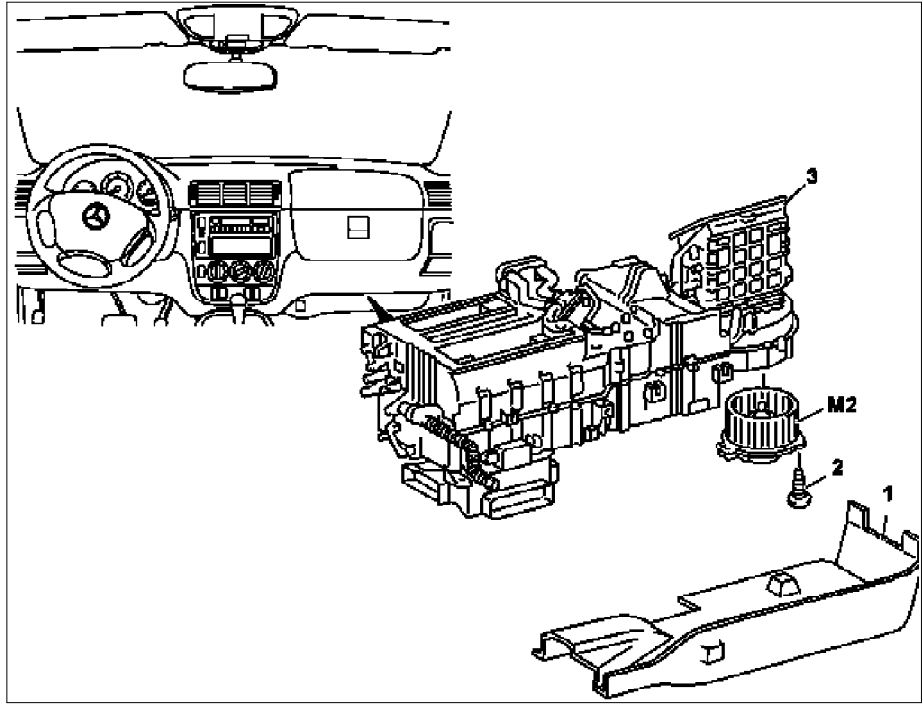

P83.30-0764-06