

MODEL 163 up to 31.8.01

	Dust filter, location		GF83.10-P-2104-01GH
	Dust filter task	The dust filter filters the fresh air and recirculating air flowing through the heater/evaporator housing.	
	Dust filter, function	The dust filter element consists of fleece, which cleans the air flowing through. The dust filter filters over 80 % of particles from 0.3 mm in size and up to 100 % of 0.5 m m sized particles and pollen.	