


The electric heater booster (R22/3) is located behind the heater heat exchanger in the A/C housing.

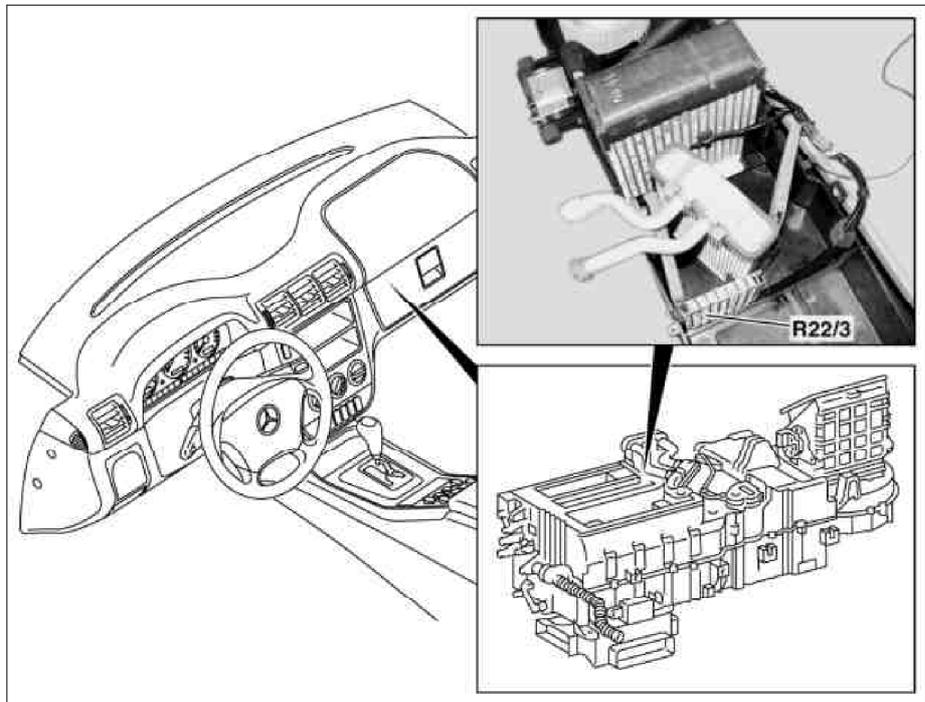

P83.70-3075-06