

Function up to 31.08.01

The air supply to the front footwell air vents can be opened and closed via the air distribution switch using a cable.
There is no separate adjusting facility. Temperature-controlled air comes out of the front footwell air vents.

Function as of 1.09.01

The air supply to the front footwell air vents can be opened and closed via the air distribution switch with the footwell flap actuator motor.
There is no separate adjusting facility. Temperature-controlled air comes out of the front footwell air vents.