

**Function**

The air supply to the rear footwell air vent can be opened and closed via the air distribution switch.

There is no separate adjusting facility. Temperature-controlled air comes out of the rear footwell air vent.