

GF83.20-P-2108GC	Heater core, location/purpose/function	24.6.98
------------------	--	---------

MODEL 163, 168

	Heater core, location	Model 168 Model 163	GF83.20-P-2101-02GC GF83.20-P-2101-02GH
	Heater core, purpose	The heater core serves for heating up the air flowing through on the way to the various defroster, ventilation and heating nozzles in the vehicle passenger compartment.	
	Heater core, function		GF83.20-P-2101-01GC