


The heater core (1) is located behind the instrument panel in the heater/A/C housing.

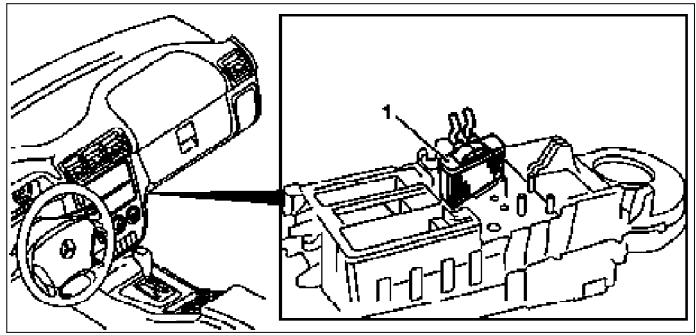

P83.20-2014-10