


MODEL 163 up to 31.8.01

168 up to except CODE (580) Air conditioning or Tempmatic for USA

Shown on model 168 as of 1.03.01

1 Heater housing

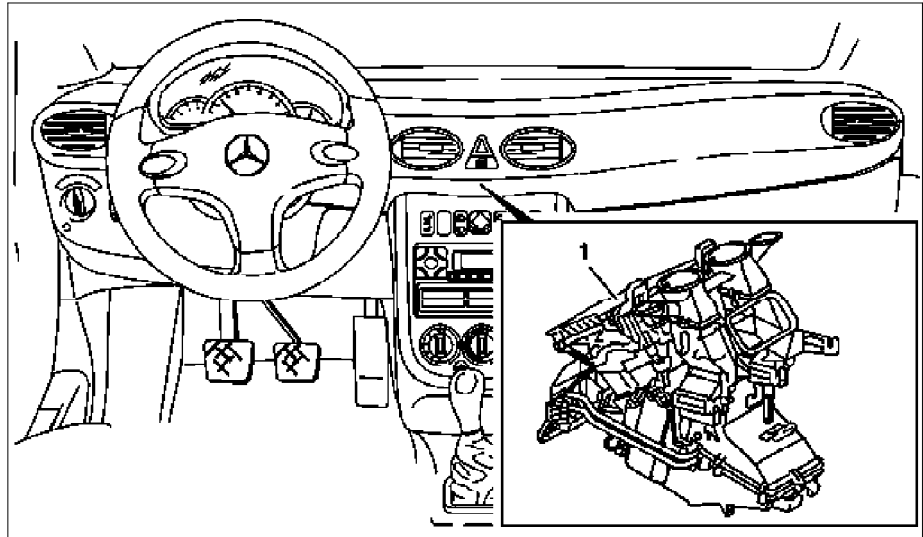

P83.20-2138-05

	Heater housing position	The heater housing (1) is located beneath the instrument panel. Model 168 up to 28.02.01 Model 163	GF83.20-P-2103-01GC GF83.20-P-2103-01GH
	Heater housing task		GF83.20-P-2103-03GC
	Heater housing function	Model 168	GF83.20-P-2103-02GC
		Model 163	GF83.20-P-2103-02GH