


Windshield defroster nozzle


The windshield defroster nozzle (1) is located in the instrument panel below the windshield.

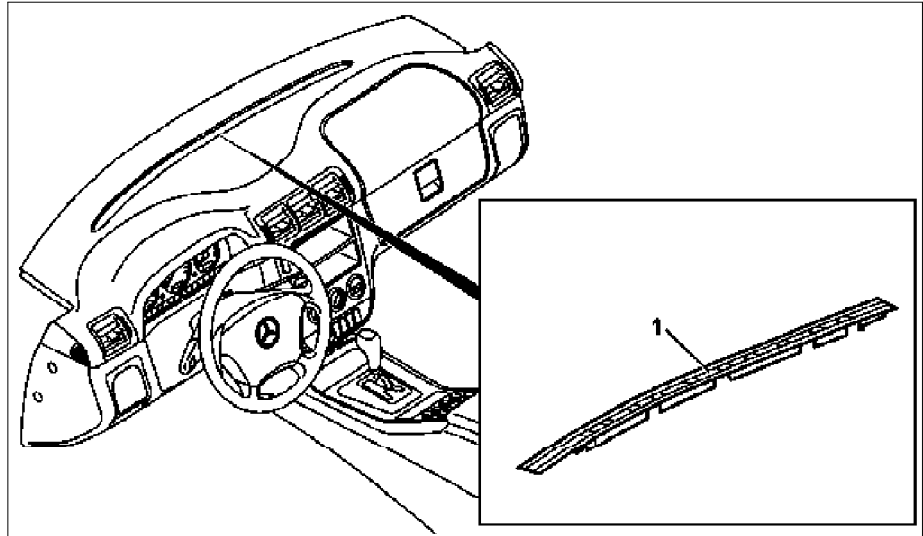

P83.10-2016-05

Side window defroster nozzles

The side window defroster nozzles (1) are located on the left and right in the instrument panel.

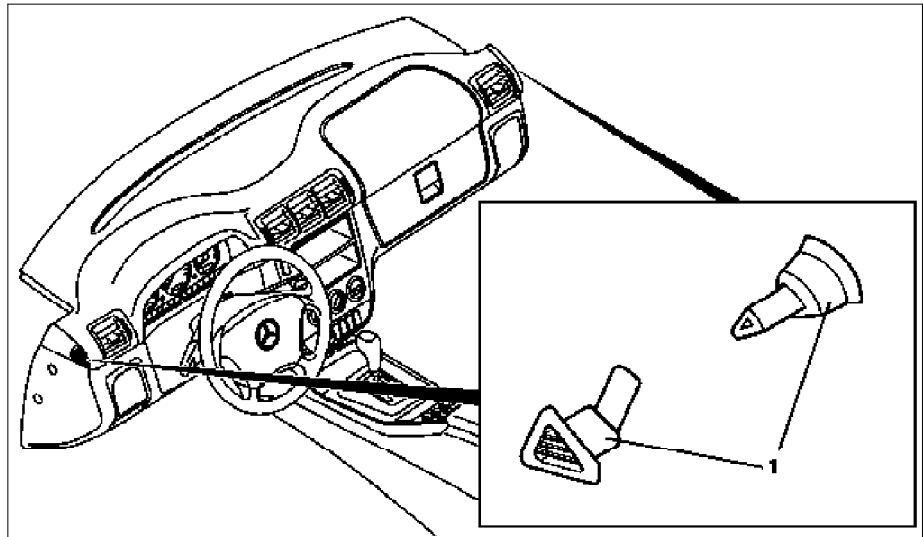

P83.10-2017-05