


The outside air temperature sensor (B10/5) is located at the front on the air inlet of the evaporator housing.

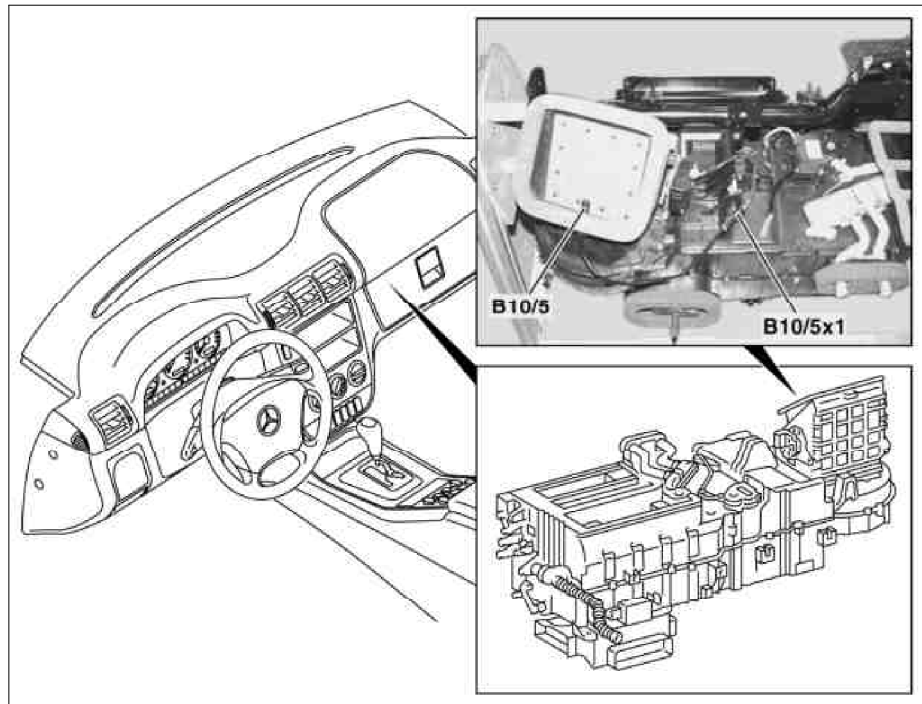

P83.57-2016-06