

MODEL 163 up to 31.8.01,
168

	Series resistor group, position	Model 168 Model 163	GF83.10-P-2124-01GC GF83.10-P-2124-01GH
	Series resistor assembly task	The series resistor assembly controls the blower voltage depending on the relevant blower level setting.	
	Series resistor assembly function	Model 168 up to 28.02.01	GF83.10-P-2124-02GC
		Model 168 as of 01.03.01 Model 163	GF83.10-P-2124-02GD GF83.10-P-2124-02GH