



- 1 Release arm
2 Sealing ring

- A Release position
B Assembly position

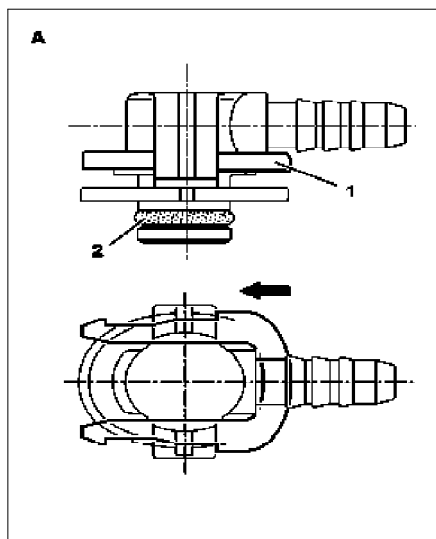

P47.25-0212-03

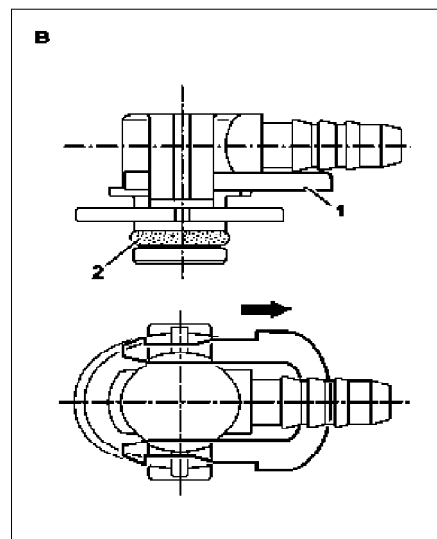

P47.25-0213-03

i The low pressure lines of the fuel system have plug connections with a release arm (1) in place of screw connections. The lines are sealed by means of a seal (2).

Disconnecting

- 1 Press the release arms (1) down to the stop in release position as shown in picture A (arrow).
- 2 Disconnect connector on low-pressure line.
- 3 Pull back the release arms (1) again immediately to the stop into the assembly position as shown in picture B (arrow).
 - ⚠ The release arms (1) must not be kept over a long period in the release position (A) otherwise leaks can occur due to deformation of the low-pressure line.

Attaching

- 4 Check whether the release arm (1) is in the installed position (b).
 - ⚠ If the release arms (1) were kept for a long time in the release position (A) the low-pressure line must be replaced otherwise leaks can occur due to deformation of the low-pressure line.
- 5 Insert connector on low-pressure line.
- 6 Ensure that the connector is firmly seated and free of leaks.