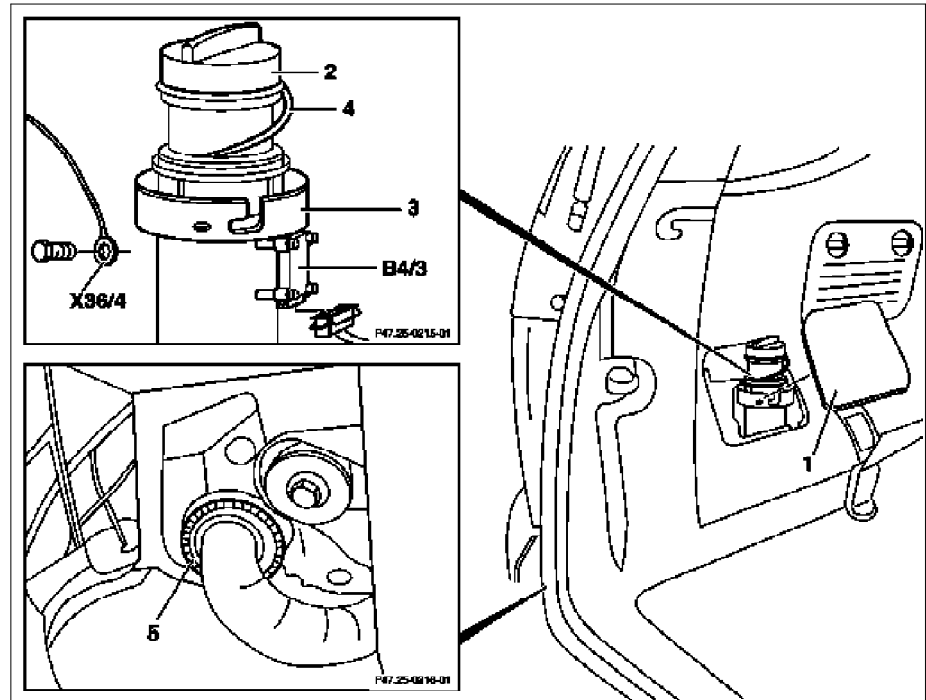
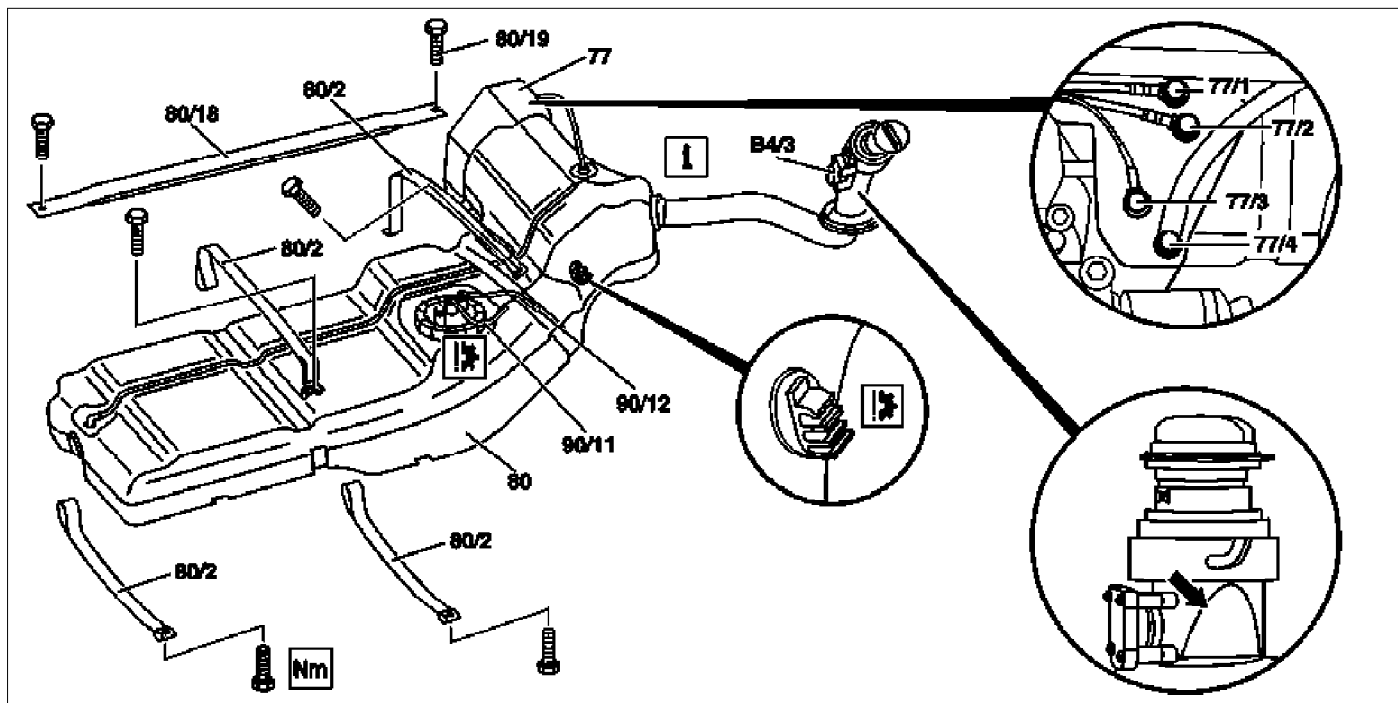


MODEL 163.113 with ENGINE 612.963  
 MODEL 163.128 with ENGINE 628.963  
 MODEL 163.136 with ENGINE 111.977  
 MODEL 163.154 with ENGINE 112.942  
 MODEL 163.157 with ENGINE 112.970  
 MODEL 163.172 with ENGINE 113.942  
 MODEL 163.175 with ENGINE 113.965

1 Left side paneling cover  
 2 Filler cap  
 3 Bayonet lock  
 4 Filler cap attachment  
 5 Rubber seal  
 B4/3 Fuel tank pressure sensor  
 X36/4 Fuel tank filler neck/ground screw connection



P47.10-0407-06



P47.10-0413-09

 


 
 
 
 

 
 


 

 
 
 
 
 
 

 
 
 
77 Activated charcoal canister  
 77/1 Fine venting connection  
 77/2 Regeneration connection  
 77/3 Spring chamber venting connection

77/4 Frischluftanschluss  
 80 Fuel tank  
 80/2 Tensioning straps  
 80/18 Longitudinal strut for tensioning straps

80/19 Mounting screw  
 90/11 Fuel return line  
 90/12 Fuel feed line  
 B4/3 Fuel tank pressure sensor

#### Modification notes

7.11.00	Figure modified from 170 Nm auf 200 Nm	Value in BA35.10-P-1001-01C changed for model 163	*BA35.10-P-1001-01C
---------	--	---	---------------------

	Remove, Install		
 <b>Danger!</b>	<b>Risk of explosion</b> from fuel igniting, <b>risk of poisoning</b> from inhaling and swallowing fuel as well as <b>risk of injury</b> to eyes and skin from contact with fuel.	Fire, sparks, open flames or smoking forbidden. Pour fuels only into suitable and appropriately marked containers. Wear protective clothing when handling fuel.	AS47.00-Z-0001-01A
1	Drain fuel tank	 Via fuel pump. NOT for model 163.113/128.  If fuel pump faulty, and model 163.113/128. 	AR47.10-P-4001GH AR47.10-P-4000GH *BF47.10-P-1001-01A
2	Unscrew filler cap (2) and detach from filler cap attachment (4)		
3.1	Remove left seat of 3rd seat row	 If installed. See owner's manual	
4	Unclip cover of left-hand side panel (1)		
5.1	Detach fuel lines of expansion reservoir and separate from filler neck	 As of VIN A289565. NOT for model 163.113/128.	
6	Detach fuel filler neck from guide funnel	 <b>Installation:</b> Check O-ring and replace if necessary. Ensure that the bayonet-lock <b>remains above</b> the pressure sensor. Ensure it is correctly located when installed.   Open bayonet lock (3) to do this.	
7	Pull filler neck through toward interior	 Screw on cap again in order to avoid fuel flowing out.	
8.1	Remove fuel tank pressure sensor (B4/3)	 Only USA version	AR47.10-P-8022GH
9.1	Detach bolted connection of fuel tank filler neck/ground (X36/4) from filler neck	 NOT for model 163.113/128.	
10.1	Cut cable strap for retaining clips of fuel lines at filler neck and remove retaining clips	 As of VIN A289565. NOT for model 163.113/128.	
 <b>Danger!</b>	<b>Risk of fatal accident</b> from vehicle slipping or toppling off the lift platform	Align vehicle between the columns of lifting platform and position the four support plates below the support strongpoints specified by the vehicle manufacturer.	AS00.00-Z-0010-01A
11	Place the vehicle on lifting platform		AR00.60-P-1000GH
12	Separate rubber seal (5) from underside of vehicle and remove filler neck from interior	 Do not damage fuel lines at filler neck.	
<b>e</b>	Remove left rear wheel Removing and installing wheels, rotating if necessary		AP40.10-P-4050GH
14	Remove spare wheel and spare wheel carrier complete	 NOT in the case of spare wheel holder/spare wheel, code 849.	
15	Cut a large safety cable strap for filler neck at bracket on longitudinal frame member		
16	Remove bracket from longitudinal frame member		
17	Disconnect connection for regeneration (77/2) and fresh air connection (77/4) on activated charcoal canister (77)	 <b>Installation:</b> Connect up lines as per connection diagram: #  Engine 111 Engines 112, 113 Engines 112, 113 version I  Charcoal canister and fuel tank form a single unit. NOT for model 163.113/128.	AR47.30-P-8212-01GJ AR47.30-P-8212-01GI AR47.30-P-8212-01GH
18	Detach vent hose	 At rear differential to rear of activated charcoal reservoir.	
19	Remove rear exhaust system heat shield.	 Do not damage boot at rear axle shaft.	
20	Disconnect rear propeller shaft at differential	 <b>Installation:</b> Install new self-locking bolts.   Tie up propeller shaft e.g. using welding wire   Heat bolts with hot air fan to facilitate removing. Mark propeller shaft and differential gear flange for correct installed position.  	*BA41.10-P-1002-01C

21	Detach rear brake cables	<b>i</b> Unclip at underfloor of vehicle and unscrew brake cable holder on right and left at frame.	
22.1	Unbolt check strap of rear axle carrier from underfloor of vehicle	<b>i</b> As of VIN A145273, X708319.	
23	Remove left rear stone shield		
24	Remove lower tensioning straps (80/2) and loosen the upper tensioning straps	<b>i</b> Tensioning straps are color-coded and cannot be mixed up. Support fuel tank using assembly jack. <b>Nm</b>	*BA47.10-P-1001-01D
25	Remove longitudinal strut for tensioning straps (80/18)	<b>Nm</b>	*BA47.10-P-1002-01D
26.1	Unscrew linkage for headlamp range adjustment <b>at the top</b>	<b>i</b> If installed.	
27	Unscrew nuts on bottom of the shock absorbers at the transverse control arm	<b>i</b> <b>Installation:</b> Install new self-locking nuts.	
		<b>Nm</b>	*BA32.25-P-1001-03D
28	Unscrew rear axle carrier from floor of vehicle and lower as far as possible	<b>i</b> Support rear axle carrier. <b>i</b> <b>Installation:</b> Install new self-locking bolts. <b>Nm</b>	*BA35.10-P-1001-01C
29	Lower fuel tank	<b>i</b> Support fuel tank.	
30	Remove upper tensioning strap <b>at the rear</b>	<b>i</b> The tensioning strap at the top at the front.	
31.1	Unclip lines from side of fuel tank	<b>i</b> As of VIN A289565, X754620. <b>i</b> <b>Installation:</b> The lines must not be damaged.	
32	Disconnect fuel pump electrical plug connection		
33	Disconnect fuel feed line (90/12) and fuel return line (90/11)	<b>i</b> Fuel lines must not be bent. <b>S</b> Pliers	*163589003700
34	Remove fuel tank (80)	<b>i</b> <b>Installation:</b> Ensure that the sealing rubbers (5) seat correctly in the body floor to prevent water entry. <b>i</b> Do not damage fuel lines at filler neck. <b>i</b> Guide filler neck with its chamfered side (arrow) through between frame and body. Filler neck and fuel tank cannot be separated from each other.	
35	Install in the reverse order		
36.1	Dispose of fuel tank	<b>i</b> Only when replacing the fuel tank.	
<b>O</b>	Disposal of fuel tanks		OS47.10-P-0001-01A

**Nm** Rear axle carrier

Number	Designation		Model Series 163
BA35.10-P-1001-01C	Self-locking bolt, rear axle carrier at front and rear to frame floor	Nm	200

**Nm** Propeller shaft

Number	Designation		Model Series 163
BA41.10-P-1002-01C	Self-locking bolt, rear propshaft at rear axle center section	Nm	50

**Nm** Fuel tank

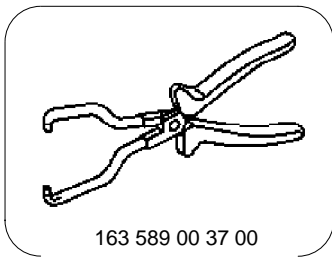
Number	Designation		Models 163.113/ 128/ 136/ 154/157/ 172/175	Model 163.174
BA47.10-P-1001-01D	Screws for tensioning straps	Nm	20	20
BA47.10-P-1002-01D	Longitudinal strut for check straps	Nm	20	20

**Nm** Rear axle shock absorber

Number	Designation		Model Series 163
BA32.25-P-1001-03D	Self-locking nut, shock absorber to lower wishbone	Nm	85

**Fuel tank**

Number	Designation	Models 163.113/ 136/154/ 172 up to 31.08.01	Models 163.113/ 136/154/ 172 as of 01.09.01 Models 163.157/ 175		
BF47.10-P-1001-01A	Fuel tank capacity	Total capacity	Liter	72	83
		Reserve capacity	Liter	10	12



163 589 00 37 00

Pliers