


MODEL 163.154 with ENGINE 112.942 with CODE (494a) USA version  
 MODEL 163.157 with ENGINE 112.970 with CODE (494a) USA version  
 MODEL 163.172 with ENGINE 113.942 with CODE (494a) USA version  
 MODEL 163.174 with ENGINE 113.981 with CODE (494a) USA version  
 MODEL 163.175 with ENGINE 113.965 with CODE (494a) USA version

B4/3 Fuel tank pressure sensor

Arrow Socket

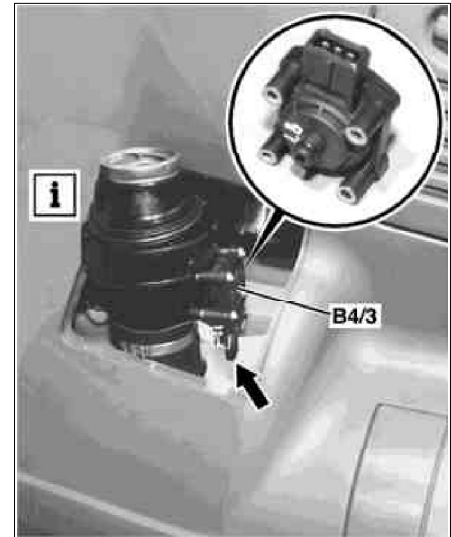

P47.10-0390-02

☒ ☒	Remove, Install		
⚠ <b>Danger!</b>	<b>Risk of explosion</b> if ignition takes place, <b>risk of poisoning</b> caused by inhaling fuel vapors or swallowing fuel as well as <b>risk of injury</b> to skin and eyes exposed to fuel.	Fire, sparks, open flames or smoking forbidden. Pour fuels only into suitable and appropriately marked containers. Wear protective clothing when handling fuel.	AS47.00-Z-0001-01A
1	Unscrew filler cap and remove securing tab		
2	Unclip left side trim cover		
3	Detach fuel filler neck from guide funnel	<p><b>i</b> <b>Installation:</b> Check O-ring and replace if necessary. Ensure it is correctly located when installed.</p> <p><b>i</b> To do this, open bayonet lock.</p>	
4	Disconnect coupling (arrow) for fuel tank pressure sensor (B4/3)		
5	Unscrew fuel tank pressure sensor (B4/3) from fuel tank filler neck		
6	Install in the reverse order		