

AR01.20-P-5014-02A	Remove/install cylinder head cover trim		
--------------------	---	--	--


Nm Crankcase ventilation, cylinder head cover

Number	Designation	Engine	Engine
		611.960/ 961/962	
BA01.20-P-1002-01A	Screw of trim panel of cylinder head cover to cylinder head cover	Nm	10
BA01.20-P-1003-01A	Screw attaching cover panel to charge air distribution pipe	Nm	10

Nm Crankcase ventilation, cylinder head cover

Number	Designation	Engine	Engine
		646.951/961, 647	646.962/963
BA01.20-P-1002-01G	Bolt, trim panel of cylinder head cover to cylinder head	Nm	9
BA01.20-P-1003-01G	Bolt, cover to charge air distribution pipe.	Nm	9

- 1 Unscrew bolts (3, 5).
i Installation: Pay attention to tightening torques **Nm**.
- 2 Pull out trim panel (2) of charge air distribution pipe to the side.
i Installation: Insert plates of trim panel (2) into the rubber mounts (4).
- 3 Take off trim panel (1) of cylinder head cover.
i Installation: Ensure the trim panel (1) is correctly installed; ensure no lines are trapped.
- 4 Install in the reverse order.

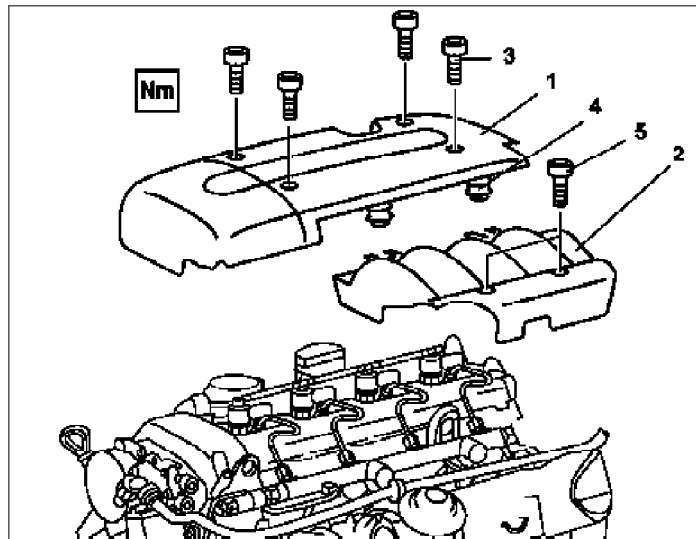

Shown on ENGINE 611.961

- 1 Unclip cover on left and right at top and remove (arrow)
i Installation: Ensure the trim panel is correctly installed; ensure no lines are trapped.
- 2 Install in the reverse order.

Illustrated on model 646.962



P01.20-0242-11

P01.00-2358-11