


ENGINE 612.963 in MODEL 163.113

- 1 Fuel feed line
- 2 Fuel return flow line
- 3 Fuel cooler
- 4 Bolts of fuel cooler
- 70 Fuel full-flow filter

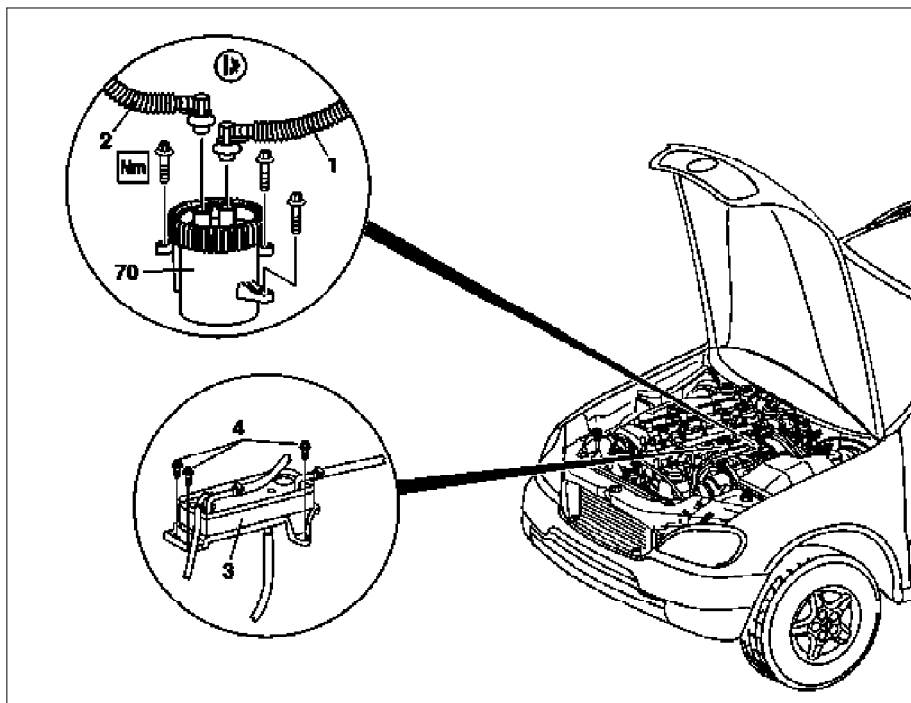


P47.20-2043-06

Operation no. of operation texts or standard texts and flat rates

Sector	Op. no.	Operation text
P	075560	REMOVING AND INSTALLING FUEL FULL-FLOW FILTER
P	075563	REPLACING FUEL FULL-FLOW FILTER
P	075564	REPLACING FUEL FULL-FLOW FILTER (AFTER INSPECTING)

	Removing, installing		
Danger!	Risk of injury from fingers being jammed or bruised when removing or installing and aligning hood, doors, trunk lid/tailgate or sliding roof	Ensure that no parts of your body or limbs are within the operating range when moving such components.	AS00.00-Z-0011-01A
Danger!	Risk of explosion as a result of fuel vapors igniting. Risk of poisoning as a result of inhaling fuel vapors. Risk of injury as a result of fuel coming into contact with skin and eyes.	No fire, naked flame or smoking. Pour fuels only into suitable and appropriate marked containers. Wear protective clothing when handling fuel.	AS47.00-Z-0001-01A
1	Open hood and raise to vertical position	Have assistant secure hood.	AR88.40-P-1000GI
2	Remove trim panel of charge air distribution pipe	Nm Nm	AR01.20-P-5014-02B *BA01.20-P-1002-01A *BA01.20-P-1003-01A
3	Disconnect fuel lines (1, 2) at fuel full-flow filter (70)	Collect fuel which flows out. Pay attention to use of locking arm. See: # Disconnecting and connecting fuel lines at engine.	AR47.25-P-1000-01A
4	Take off fuel cooler (3)	Take off only the bolts (4) and raise fuel cooler slightly.	
5	Remove fuel full-flow filter (70)	Collect fuel which flows out. Installation: If the fuel full-flow filter has been drained, it must be filled with fuel after being installed and before starting the engine to ensure engine starts properly. Nm	*BA47.20-P-1001-02A
6	Install in the reverse order		

 Danger!	Risk of accident as a result of vehicle starting off when engine running. Risk of injury as a result of bruises and burns if you insert your hands into engine when it is being started or when it is running.	Secure vehicle to prevent it starting off. Wear closed and close-fitting work clothes. Do not grasp hot or rotating parts.	AS00.00-Z-0005-01A
7	Run engine and inspect fuel system for leaks		

 **Crankcase ventilation, cylinder head cover**

Number	Designation	Engine 612.963
BA01.20-P-1002-01A	Screw of trim panel of cylinder head cover to cylinder head cover	Nm 10
BA01.20-P-1003-01A	Screw of trim panel of charge air distribution pipe to charge air distribution pipe	Nm 10

 **Fuel filter**

Number	Designation	Engine 612.961/ 963
BA47.20-P-1001-02A	Bolt of fuel filter to charge air distribution pipe	Nm 14