

ENGINE 611.960 in MODEL 202.133 /134 /193 /194

ENGINE 611.961 in MODEL 210.006 /007 /206 /606

ENGINE 612.961 in MODEL 210.016 /216 /616


ENGINE 612.963 in MODEL 163.113

ENGINE 613.961 in MODEL 210.026 /226

ENGINE 613.960 in MODEL 220.026 /126

Shown on engine 611.960


70	Fuel filter housing
70/1	Fuel filter input
70/2	Fuel filter output
70/3	Threaded ring
70/4	Cap
70/5	Seal
70/6	Filter element

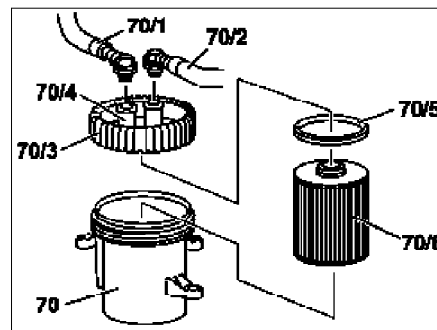

P47.20-0289-01

Shown on engine 612.961

70/1	Fuel line input
70/2	Fuel line output
70/3	Threaded ring
70/4	Cap
70/5	Seal
70/6	Filter element
70/7	Fuel return line
70/8	Fuel feed line

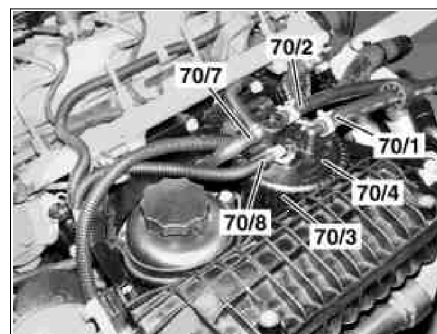

P07.16-2101-01

	Remove/install and replacing		
Danger!	Risk of death. Death may result if vehicle slips or topples from the lifting platform.	Align vehicle between the columns of the lifting platform and position the four support plates at the lifting platform support points specified by the vehicle manufacturer.	AS00.00-Z-0010-01A
Danger!	Risk of explosion from fuel igniting, risk of poisoning from inhaling and swallowing fuel as well as risk of injury to eyes and skin from contact with fuel.	No fire, sparks, naked flames or smoking. Pour fuels only into suitable and appropriately marked containers. Wear protective clothing when handling fuel.	AS47.00-Z-0001-01A
1	Remove trim panel of charge air distribution pipe		
2	Disconnect fuel return line (70/7) and fuel feed line (70/8)		
3	Unscrew threaded ring (70/3) and remove together with cover (70/4).	If the fuel filter housing is soiled inside, it must be removed and cleaned (against separate order): #	AR47.20-P-1070HB
f	Replace filter insert (70/6)	After inserting the filter element Fill fuel filter housing with fuel.	
5	Replace sealing ring (70/5)		
6	Mount threaded ring with cover so that the groove latches at the fuel filter housing	Tighten threaded ring by hand.	
7	Mount fuel return line (70/7) and fuel feed line (70/8)		
8	Install trim panel of charge air distribution pipe		*BA01.20-P-1003-01A
Danger!	Risk of accident. Accidents may result if the vehicle starts off unintentionally with the engine running. Risk of injury. Crushing and burn injuries may result while working on engine during when it is being started or when it is in operation.	Secure vehicle to prevent it from moving. Wear closed and snug-fitting work clothes. Do not grasp hot or rotating parts.	AS00.00-Z-0005-01A
9	Run engine and inspect fuel filter for leaks		

Crankcase ventilation, cylinder head cover

Number	Designation	Engine 611.960/ 961/962	Engine 612.961/ 962/967	Engine 612.963	Engine 613.960/ 961
BA01.20-P-1003-01A	Screw attaching cover panel to charge air distribution pipe	Nm 10	10	10	10