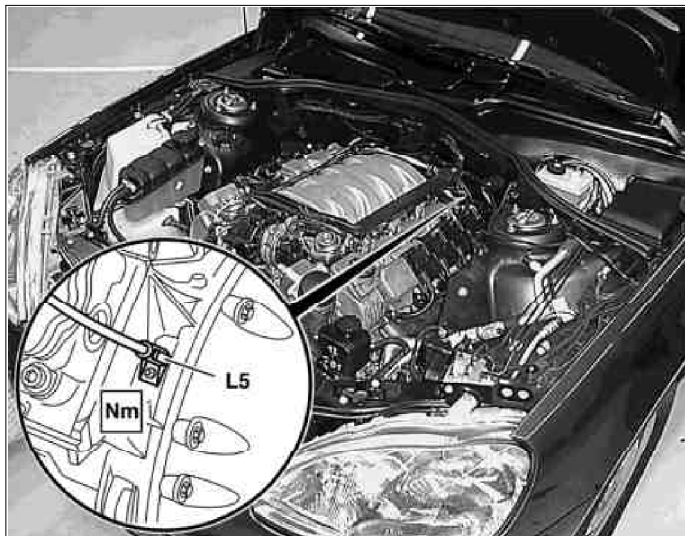


 

 
 


ENGINE 112.910 in MODEL 202.026 /086
 ENGINE 112.920 in MODEL 202.029 /089
 ENGINE 112.921 in MODEL 210.063 /081 /263 /281
 ENGINE 112.922 in MODEL 220.063
 ENGINE 112.923 in MODEL 129.059
 ENGINE 112.940 in MODEL 208.365 /465
 ENGINE 112.941 in MODEL 210.065 /082 /265 /282
 ENGINE 112.942 in MODEL 163.154
 ENGINE 112.943 in MODEL 129.064
 ENGINE 112.944 in MODEL 220.065 /165
 ENGINE 113.940 in MODEL 210.070 /270
 ENGINE 113.941 in MODEL 220.070 /170
 ENGINE 113.960 in MODEL 215.375, 220.075 /175
 ENGINE 113.961 in MODEL 129.068
 ENGINE 112.945 in MODEL 463.209 /232 /233 /244 /245 /250
 ENGINE 113.944 in MODEL 202.033 /093
 ENGINE 113.980 in MODEL 210.074 /274
 ENGINE 113.943 in MODEL 208.370 /470
 ENGINE 113.984 in MODEL 208.374
 ENGINE 113.981 in MODEL 163.174
 ENGINE 112.912 in MODEL 203.061 /261, 209.361 /461
 ENGINE 112.946 in MODEL 203.064 /264
 ENGINE 112.947 in MODEL 170.465
 ENGINE 112.960 in MODEL 170.466
 ENGINE 113.942 in MODEL 163.172
 ENGINE 112.961 in MODEL 203.065 /265
 ENGINE 113.965 in MODEL 163.175
 ENGINE 113.963 in MODEL 230.475
 ENGINE 112.913 in MODEL 211.061
 ENGINE 112.949 in MODEL 211.065
 ENGINE 113.967 in MODEL 211.070
 ENGINE 113.962 in MODEL 463.206 /240 /241 /247 /248 /249 /254
 ENGINE 113.982 in MODEL 463.243 /246
 ENGINE 112.955 in MODEL 209.365 /465
 ENGINE 112.916 in MODEL 203.081 /281
 ENGINE 112.953 in MODEL 203.084 /284
 ENGINE 112.973 in MODEL 230.467
 ENGINE 112.972 in MODEL 220.067 /167
 ENGINE 112.970 in MODEL 163.157
 ENGINE 112.975 in MODEL 220.087 /187
 ENGINE 113.948 in MODEL 220.083 /183
 ENGINE 113.966 in MODEL 220.084 /184
 ENGINE 112.917 in MODEL 211.080 /280
 ENGINE 112.954 in MODEL 211.082 /282
 ENGINE 113.969 in MODEL 211.083 /283

Shown on Engine 113 in Model 220

L5 Crankshaft position sensor



 	Remove/Install		
1.1	Remove engine compartment cover with integrated air cleaner	All except Engine 112.960 in Model 170.466, Engine 112.961 in Model 203.065/ 265  Remove air cleaner by lifting vertically up and away from the cylinder head covers.  Installation: With sliding compound, slightly moisten the rubber retainers on the cylinder head covers and the sealing ring of the hot film mass air flow sensor in the air cleaner housing.	
1.2	Remove air cleaner housing	Engine 112.960 in Model 170.466 Engine 112.961 in Model 203.065/265	AR09.10-P-1150SVK
2	Remove crankshaft position sensor (L5)		*BA15.10-P-1001-03A
3	Install in the reverse order		
4.1	Reinitialize crankshaft position sensor (L5) using STAR DIAGNOSIS	 If the crankshaft position sensor (L5) was replaced, a re-initialization must be carried out with STAR DIAGNOSIS in the "Control unit adaptations" menu item.	
		Diagnosis system STAR DIAGNOSIS	*WE58.40-Z-1013-06A

 **Position sensor**

Number	Designation	Engine		
		112.910/911/912/ 913/914/915/ 916/917/920/ 921/922/923/ 940/941/942/ 943/944/945/ 946/947/949/ 951/953/954/ 955/960/961/ 970/972/973/975	113.940/941/ 942/943/944/ 948/960/961/ 962/963/965/ 966/967/968/ 969/980/981/ 982/984/986/ 992/993	
BA15.10-P-1001-03A	Crankshaft position sensor to engine block	Nm	8	8

Workshop equipment/MB testers (see Workshop Equipment Manual)

WE58.40-Z-1013-06A	Compact STAR DIAGNOSIS system for passenger cars, order number 6511 1801 00
--------------------	---