

t A	Scope of test	Measuring instrument/ Test connection	Operation/ Requirement	Specified value	D Possible cause/ Remedy
1.0	HHT interface Connection between A1 and data link connector (DTC readout) (X11/4)	X11/4 15 W b L 11 (B.11)	Ignition: OFF Remove A1 Coupling "B" (12-pin) disconnected	T 5 W	DCable