

t A	Scope of test	Measuring instrument/ Test connection	Operation/ Requirement	Specified value	DPossible cause/ Remedy
1.0	Instrument cluster (A1) Voltage supply, terminal 30	A1 3 W C L 11 (A.3) (A.11)	Ignition: OFF Remove A1 Coupling "A" (18-pin) disconnected	11-14 V	DFuse f13 in fuse and relay box F1 DCables Value in order# t 1.1
1.1	Voltage supply, terminal 15	A1 3 W C L 9 (A.3) (A.9)	Ignition: ON	11-14 V	DFuse f22 in fuse and relay box F1 DCables Value in order# t 1.2
1.2	Voltage supply, terminal 15R	A1 3 W C L 7 (A.3) (A.7)	Ignition: ON	11-14 V	DFuse f10 in fuse and relay box F1 DCables Value in order# DA1