

**MODEL 129, 140 as of 1.6.96,  
163, 168, 170,  
202 as of 1.8.96,  
208 up to 31.7.99,  
210 as of 1.6.96 up to 30.6.99**

The table below lists the various warning alarms and indications according to type (visual/acoustic) and their actuation (direct/CAN).

**Visual warning and indicator signals actuated over direct lines:**

- D Left turn signal indicator lamp (A1e1)
- D Right turn signal indicator lamp (A1e2)
- D High beam indicator lamp (A1e3)
- D Fuel reserve warning lamp (A1e4)
- D Brake fluid / parking brake warning lamp (A1e7) (except model 163)
- D Low windshield washer fluid level warning lamp (A1e13) (as of 01.09.01 also valid for model 163)
- D Low engine coolant level warning lamp (A1e11) (except model 168, model 163 as of 3.99)
- D Coolant level and temperature warning lamp (A1e11) (only model 168 as of 9.99 and only coolant level function)
- D Generator charge indicator/warning lamp (A1e5)
- D Seat belt warning lamp (A1e9)
- D Seatbelt/backrest lock warning lamp (A1e9)
- D Exterior lamp failure indicator lamp (A1e14)

- 
- D Preglow indicator lamp (A1e16)
  - D ASR warning lamp (A1e21)
  - D ASR malfunction indicator lamp (A1e22)
  - D CHECK ENGINE malfunction indicator lamp (A1e26), only I
  - D Catalytic converter overheat warning lamp (A1e19)
  - D ETS malfunction indicator lamp (A1e35)
  - D ETS warning lamp (A1e36)
  - D ASR warning lamp (A1e21)
  - D ASR malfunction indicator lamp (A1e22)
  - D ESP warning lamp (A1e41)
  - D ESP malfunction indicator lamp (A1e42)
  - D LOW RANGE indicator lamp (A1e53), only model 163
  - D Leak warning (only I as of 97); the fuel reserve indicator lamp (A1e4) flashes
  - D Fog lamps indicator lamp (A1e57), only model 163 except I
  - D LOW RANGE indicator lamp (A1e53), only model 163

**i** Also refer to document: Indicator and warning signals triggered over CAN data lines

- D Hydraulic fluid level warning lamp (A1e37)
- D ADS warning lamp, suspension (A1e27)
- D Steering lock warning lamp (A1e40) (only I )
- D SRS airbag malfunction indicator lamp (A1e15)
- D AIRBAG OFF indicator lamp (A1e56), only model 163 except I

**i** Also refer to document: Indicator and warning signals triggered over direct lines

**Visual warning and indicator signals actuated over CAN data lines:**

- D Brake fluid / parking brake warning lamp (A1e7)
- D Brake pad wear indicator warning lamp (A1e6)
- D Low engine oil level warning lamp (A1e12)
- D ABS malfunction indicator lamp (A1e17)
- D Preglow indicator lamp (A1e16)
- D Coolant level and temperature warning lamp (A1e11) (only model 168 as of 9.99 and only coolant temperature function)

**Acoustic warning and indicator signals actuated over direct lines:**

- D Turn signal ticker
- D Seat belt reminder
- D Switched-on lights reminder
- D Key warning
- D Soft top warning, only model 170

**i** Also refer to document: Acoustic warnings, function

**Acoustic warning and indicator signals actuated over CAN data lines:**

- D Parking brake warning
- D Vehicle speed warning
- D Vehicle speed limit warning
- D Gear warning, only model 168

**i** Also refer to document: Acoustic warnings, function

	Indicator and warning signals triggered over direct lines		GF54.30-P-3002A
	Indicator and warning signals triggered over CAN data lines		GF54.30-P-3003A
	Acoustic warnings, function		GF54.30-P-3010A