


- 58 Terminal 58
 58d Terminal 58d
 61 Terminal 61
 A1 Instrument cluster
 X11/4 Data link connector (DTC readout)
 a Engine control module
 b Traction system control module
 c Engine control module inputs, e.g. ECT sensor
 d Traction system control module inputs, e.g. wheel speed sensors
 e Direct inputs
 f Transfer case control module (N78) (model 163 only)
 g Gear recognition module (A61) or automatic clutch control module (N15/4) (model 168 only)

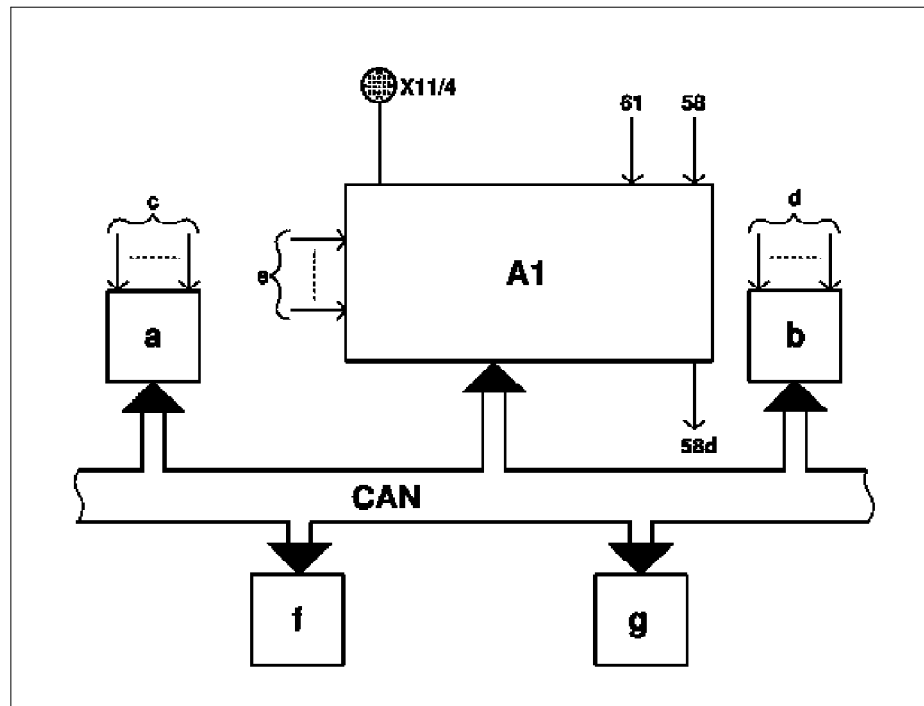

P54.30-0785-06