

AD54.30-P-5000-03A	Directly controlled display instruments troubleshooting chart IC		
--------------------	---	--	--

Directly controlled display instruments or indicator lamp/warning message:

- | | |
|--|---|
| <ul style="list-style-type: none"> D Outside temperature indicator D Fuel gauge D Oil pressure gauge (models 129 and 140 only) D Left turn signal indicator lamp D Right turn signal indicator lamp D High beam indicator lamp D Fuel reserve indicator lamp D Airbag SRS indicator lamp/MIL D AIRBAG OFF indicator lamp (only model 163 except I) D Low brake fluid level/parking brake indicator lamp (only brake fluid direct)
(both functions via CAN on model 163) D Low windshield washer fluid level indicator lamp (except models 163 and 168) | <ul style="list-style-type: none"> D Low ECL indicator lamp (except models 163 and 168) D Generator charge indicator lamp D Seat belt reminder lamp D Seat belt/backrest lock reminder lamp D Exterior lamp failure indicator lamp D Hydraulic fluid level indicator lamp (models 202 and 210 only) D ADS MIL, suspension D Turn signal clicking D Seat belt reminder lamp D Light reminder lamp D Key reminder lamp D Soft top reminder lamp (model 170 only) D Steering lock warning lamp (I) |
|--|---|