Display	Function		
Turn signal indicator ticking	Switching on the turn signal indicator is indicated acoustically by the turn signal indicator ticking. The driver's attention is brought to a defect in the turn signal system by the turn signal indicator ticking at a higher frequency. Turn signal indicator ticking is generated electromagnetically. The frequency corresponds to that of the turn signal indicator lamp. The signal comes from the combination relay (turn signal indicator with trailer coupling, rear window defroster), wiper motor, ATA (N10/2), on model 210 from the multi-function control module (N10-1) or from the driver-side signal- acquisition and actuation module (SAM) (N10/1), on model 163 from the All-Activity Module (AAM, N10), on model 168 it is generated by the integrated turn signal indicator control in the instrument cluster (A1).		
Parking brake reminder	The parking brake warning sounds when terminal 15g is ON from a speed of approx. 5 km/h.	Piezoelectric loudspeaker (quartz), function	GF54.30-P-3017A
Gear warning, model 168 only with automatic transmission or automatic clutch	The acoustic gear warning is active, when D a gear is engaged and D the brake is <u>not</u> depressed and D the accelerator pedal is <u>not</u> pressed and D the driver's door is opened. These conditions are processed in the gear	Piezoelectric loudspeaker (quartz), function	GF54.30-P-3017A
	recognition module (A61) or in the automatic clutch control module (N15/4). The information on the status of the driver's door is available as a CAN message. It is transmitted by the instrument cluster (A1).		
Speed warning	The speed warning sounds when terminal 15g is ON from a speed of approx. 120 km/h. (on national variants only)	Piezoelectric loudspeaker (quartz), function	GF54.30-P-3017A
Speed limit warning	The warning sounds if the set maximum speed is exceeded by at least 6 km/h. (on vehicles with variable cruise control only)	Piezoelectric loudspeaker (quartz), function	GF54.30-P-3017A
Seat belt reminder	On national variants only	Piezoelectric loudspeaker (quartz), function	GF54.30-P-3017A
Switched-on lights reminder	The switched-on lights reminder sounds when terminal 15g is OFF, terminal 58k is ON, when the starter key is removed and the driver's door is opened.	Piezoelectric loudspeaker (quartz), function	GF54.30-P-3017A
Key reminder	The key reminder when terminal 15g is OFF and the driver's door is open when the starter key is inserted	Piezoelectric loudspeaker (quartz), function	GF54.30-P-3017A
Soft top reminder, model 170 only	The soft top reminder sounds when terminal 15 is ON and soft top reminder input is on low level.	Piezoelectric loudspeaker (quartz), function	GF54.30-P-3017A