

**MODEL 129, 140 as of 1.6.96,  
163, 170**

The instrument cluster has two control buttons which are on the left or right next to the speedometer.

The **right control button** is used to adjust the time (refer to Owner's Manual).

The **left control button** is used

- D to regulate the instrument illumination
- D to activate the display illumination
- D to reset the trip odometer display
- D to operate the maintenance display (model 170 only bis 05.97)
- D to operate the Active Service System ASSYST (as of 06.97)

n	Purpose/function of terminal 58d, instrument display illumination	Engines 112, 113, 611 (engines with oil sensor)	GF54.30-P-3008A
n	Electronic clock		GF54.30-P-3011A
n	Active Service System (ASSYST)		GF00.20-P-0003-01A
	Operating instructions, resetting	Model 210 as of 01.03.97 with engines M111, OM 602, OM 604, OM 605 and OM 606 As of 06/97 models 129, 140, 170, 202 except engines 112, 113, 611 (valid for engines with oil level switch)	GF00.20-P-0003-01B