


AR88.30-P-2000-01GH	Remove brush guard		
---------------------	--------------------	--	--


### Modification notes

 
10.8.01	Value modified from 25 Nm to 49 Nm	Value modified in BA88.30-P-1003-01A for model 163 up to 31.8.01	*BA88.30-P-1003-01A
---------	------------------------------------	--	---------------------

 
### Detachable body components, underride guard

Number	Designation		Model 163 up to 31.8.01
BA88.30-P-1002-01A	Nut, spacer tube on brush guard	Nm	86
BA88.30-P-1003-01A	Screw, mount on brush guard	Nm	49
BA88.30-P-1011-01A	Bolt, underride guard to brush guard	Nm	25
BA88.30-P-1015-01A	Nut, underride guard to bracket	Nm	49
BA88.30-P-1016-01A	Bolt, front section of underride guard to rear section of underride guard	Nm	49

1.1 Remove screws (1) and nuts (2) from underride guard (3) at bottom of vehicle .


 Only if available.

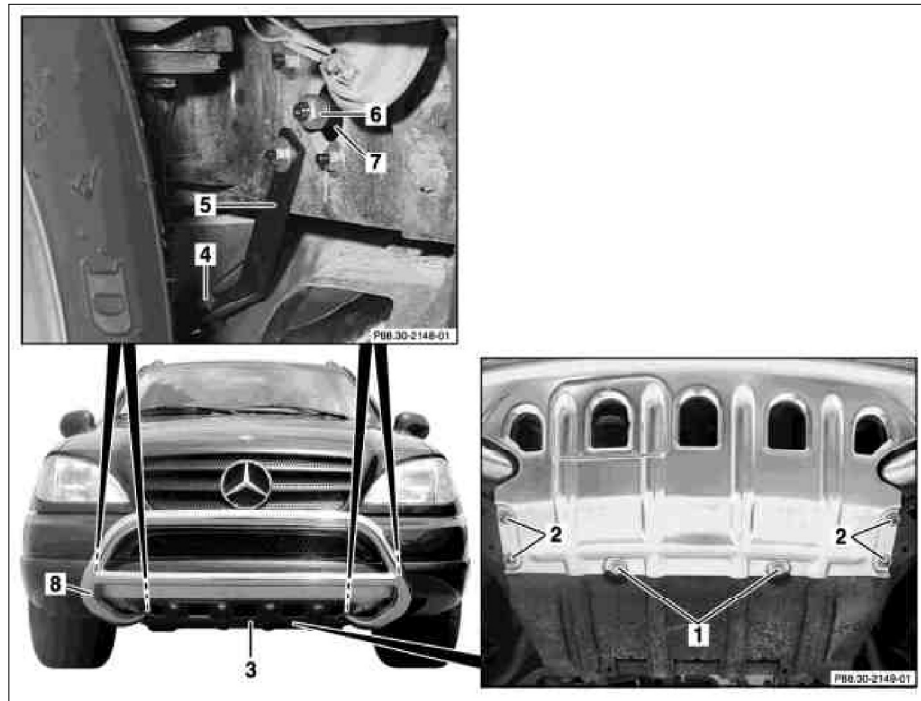
2 Remove screw for brush guard (4) from inner mount at bottom (5) .

3 Remove nut for spacer tube (6) .

4 Remove spacer sleeve (7) from spacer tube nut (6).

5 Remove brush guard (8) toward front.

 Carefully move out brush guard so that paint is not damaged.



P88.30-2150-06