

MODEL 163.136 /154 /172 as of 1.9.99, 163.113 /128 /157 /174 /175 40% rear seat

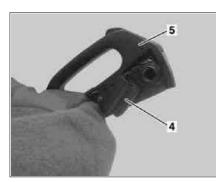


P91.12-2154-01

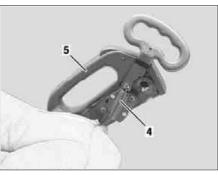


P91.12-2215-01




P91.12-2201-01

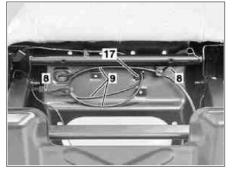

P91.12-2204-01

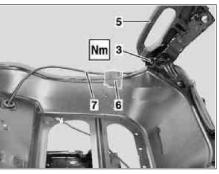

P91.12-2203-01

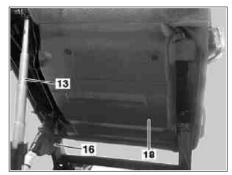

P91.12-2157-01

XX	Remove/install		
1	Remove fold-down rear backrest		AR91.12-P-1720GI
2	Remove rear seat cushion	i Do not remove rear seat covering from rear seat cushion	AR91.18-P-1850GI
3	Remove curtain from front of rear seat		
4	Detach cover (4) from vertical adjustment handle (5)		
5	Unscrew bolt (3) and detach vertical adjustment handle (5) from rear seat cushion frame	<b>i</b> Press unlocking device and pull vertical adjustment handle forwards. Observe installed position of spring!	
6	Unhook vertical adjustment cable (7) at clip (6)	i Risk of breakage!	
		<b>i</b> Clip (6) is concealed behind adhesive tape	۶ <u>.</u>
		i Installation: Stick on adhesive tape again	
7	Unhook vertical adjustment cable from vertical adjustment handle (5)		
8	Remove rubber bands (8)		
9	Unhook horizontal adjustment cable and vertical adjustment cable from clip (17)	i Risk of breakage!	
10.1	Detach cover (16) from rear seat support	i Only with 3rd seat row, code 847.	
11	Unhook horizontal adjustment cable and vertical adjustment cable from rear seat support		
12	Remove paneling of horizontal adjustment handle	<b>i</b> Risk of breakage! Unscrew screw and press paneling for horizontal adjustment handle forwards in order to unhook the retaining lugs.	
13	Unscrew screws (1) from horizontal adjustment handle (2)		
14	Unhook horizontal adjustment cable from horizontal adjustment adjustment handle (2)	i Pull out horizontal adjustment handle.	
15	Remove horizontal adjustment cable and vertical adjustment cable		

16	Install in the reverse order	i Ensure that horizontal adjustment cable	
		and vertical adjustment cable are routed	
		correctly.	