


MODELS 163.136 /154 /172 as of 1.9.99,
163.113 /128 /157 /174 /175

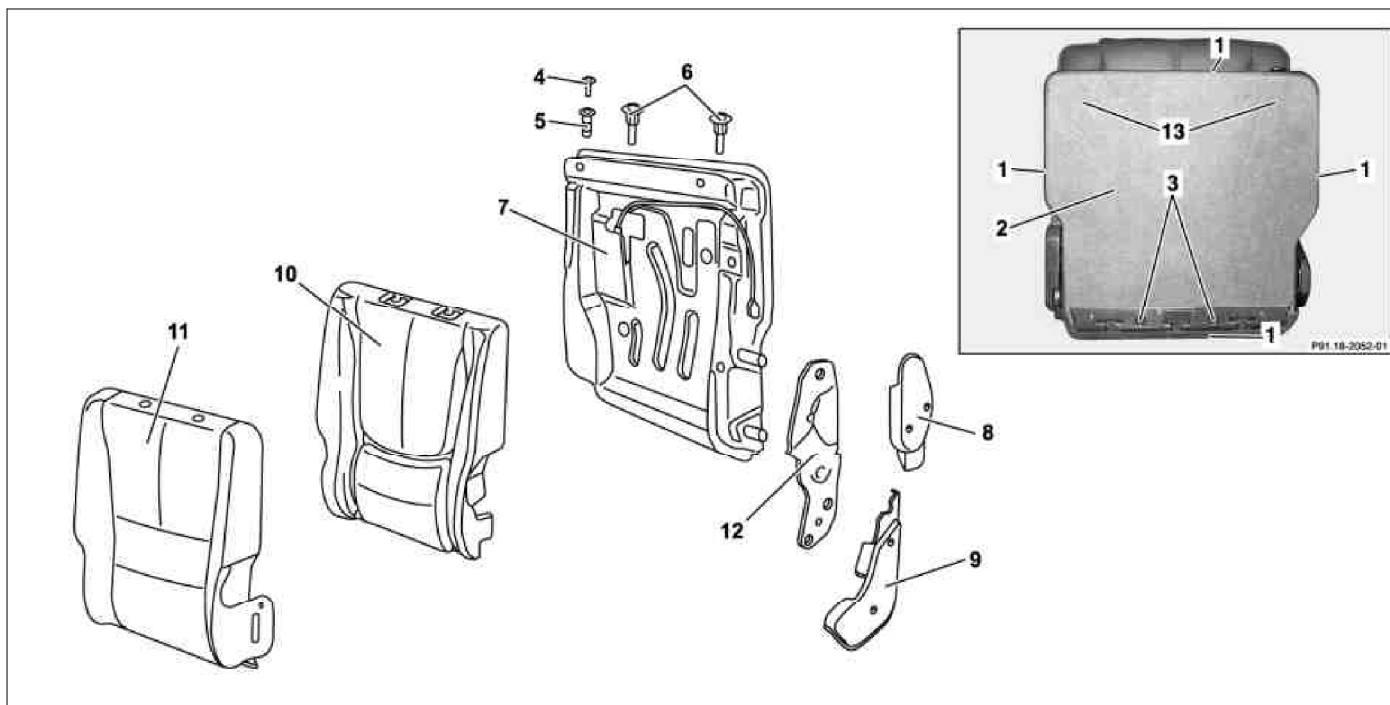

- 1 Rear backrest cover side lip
2 Rear wall paneling
3 Screws
4 Button for rear backrest release cable


- 5 Guide
6 Head restraint guide
7 Rear backrest frame
8 Side cover
9 Side cover

- 10 Rear backrest cushion
11 Rear backrest cover
12 Rear backrest fitting
13 Body-bound rivets

P91.18-2053-09

	Remove/Install		
1	Remove fold-down rear backrest		AR91.12-P-1720GI
2.1	Remove rear seat backrest fitting (12)	Only 40% rear seat.	AR91.12-P-1730GI
3	Pull out rear backrest cover side lip (1) on the back of the rear backrest		
4	Unscrew bolts (3) from the rear wall paneling (2)	Torx bit set	*000589011000
5	Remove rear wall paneling (2)	Pull on the top corners of the rear wall paneling, in order to remove the body-bound rivets (13). Installation: Replace body-bound rivets.	
6	Unscrew button for rear backrest release cable (4) and guide (5)		
7	Compress bottom end of head restraint guides (6) and pull out of the rear backrest frame (7)	Installation: Observe installation position of head restraint guides.	
8.1	Remove paneling from the belt guide of the center seat belt	Only 60% rear seat. Raise paneling at the front of the rear seat backrest and remove.	
9.1	Unscrew mounting screws of the belt guide of the center seat belt and remove belt guide	Only 60% rear seat. Torx bit set	*000589011000
10.1	Guide center seat belt through the rear backrest cover	Only 60% rear seat.	
11.1	Detach fabric cover behind the armrest and remove	Only 60% rear seat. Carefully unhook wires inserted at the fastening points at the top and bottom fabric cover.	

12.1	Remove armrest paneling	i Only 60% rear seat.	
13.1	Remove clips along rear backrest cover edge in the area of the armrest	i Only 60% rear seat. i 6 clips.	
14	Remove rear backrest cushion (10) from the rear backrest frame (7)		
15	Pull off the rear backrest cover (11) until the stapled wire rings become visible		
16	Bend stapled wire rings up		
17	Unhook stapled wire rings on the rear backrest cover (11) from the open wire rings		
18	Pull the rear backrest cover (11) off the rear backrest cushion (10)		
19	Install in the reverse order		

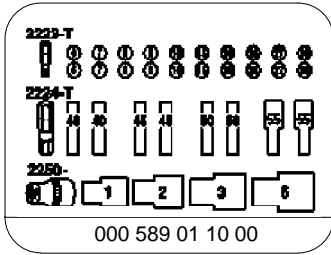

Torx bit set