
MODEL 163.136 /154 /172 as of 1.9.99,

163.113 /128 /157 /175 with CODE (293) Left and right rear side airbag

40% rear seat MODEL 163.174 40% Rear seat

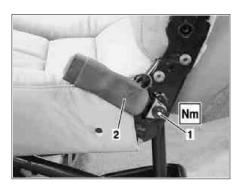


P91.40-2172-01

5

P91.18-2030-01

8

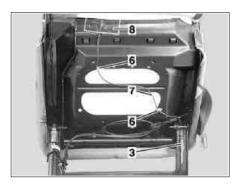

Adhesive tape

P91.40-2173-01

- 1 Bolt
- 2 Rear seat seat belt buckle
- 3 Connector

- 4 Lower cover
- 6 Retaining straps
- 7 Electrical line for rear seat seat belt

| XX  | Remove/install  |  |                     |
|-----|---|--|---------------------|
| 1   | Fold down 60% rear seat   | i See Operating Instructions   |                     |
| 2   | Fold backrest of 40% rear seat forwards   | i See Operating Instructions   |                     |
| 3   | Remove side covers on rear seat seat belt buckle  |  |                     |
| 4   | Unscrew bolt (1) from rear seat seat belt buckle (2)  | Nm   | *BA91.40-P-1006-01D |
| 5   | Turn ignition key to "0" position   | i To avoid fault codes.  |                     |
| 6   | Disconnect connector (3) from electrical line of rear seat seat belt buckle   |  |                     |
| 7.1 | Remove lower cover (4)  | i Only with 3rd seat row, code 847.  |                     |
| 8   | Remove retaining straps (6)   |  |                     |
| 9   | Unhook rear seat cover on reverse side and pull out electrical line for rear seat seat belt buckle (7) on rear seat cushion | i Loosen adhesive tape (8).  i Installation: Route electrical line for rear seat seat belt buckle (7) correctly and fasten to rear seat cushion frame using new adhesive tape (8). |                     |
| 10  | Remove rear seat seat belt buckle (2)   | i Installation: Check rear seat seat belt buckle for damage.   |                     |
| 11  | Install in the reverse order  |  |                     |

## $\overline{^{\rm Nm}}$ Seat belts/emergency tensioning retractors

| Number             | Designation                       | Model<br>163 as of<br>09/99 |
|--------------------|-----------------------------------|-----------------------------|
| BA91.40-P-1006-01D | Bolt, belt buckle to rear seat Nm | 45                          |