


MODEL 163

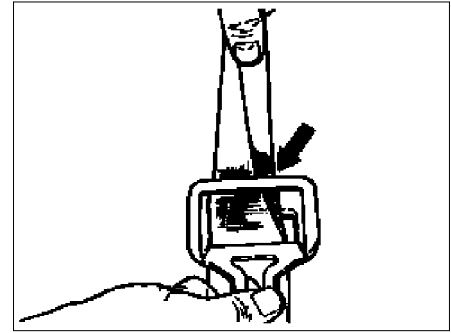

P91.40-0200-01

☐	Checking		
1	Completely pull out seat belt and check for damage	Cut fibers, chafed points or other damage in the event of complaints after obtaining separate order:# Replace seatbelt on front seat Replace seatbelt in rear Replace center seatbelt in rear Replace seatbelt in third seat row	AR91.40-P-0630GH AR91.40-P-0681GH AR91.40-P-0683GH AR91.40-P-2000GH
2	Check seat belt for twisting	In the event of complaints check whether seat belt is turned 180° behind paneling after obtaining separate order:# Remove and install seatbelt with emergency tensioning retractor on front seat Remove and install seatbelt in rear Remove and install center seatbelt in rear Remove and install seatbelt in third seat row	AR91.40-P-0630GH AR91.40-P-0681GH AR91.40-P-0683GH AR91.40-P-2000GH
3	Check locking function of automatic retractor by pulling seat belt out quickly	in the event of complaints after obtaining separate order:# Replace seatbelt on front seat Replace seatbelt in rear Replace center seatbelt in rear Replace seatbelt in third seat row i If customer refuses to have damaged seatbelt replaced, make appropriate note on repair order	AR91.40-P-0630GH AR91.40-P-0681GH AR91.40-P-0683GH AR91.40-P-2000GH
4	Check if belt buckle catches	in the event of complaints after obtaining separate order:#	
		Replace belt buckle	AR91.40-P-1515GH