


MODEL 163.113 /128 /136 /154 /157 /172 /174 /175

- 1 Front seat
- 2 Front seat seat belt buckle
- 3 Internal Torx drive bolt
- X28/13 Seat belt buckle switch connector

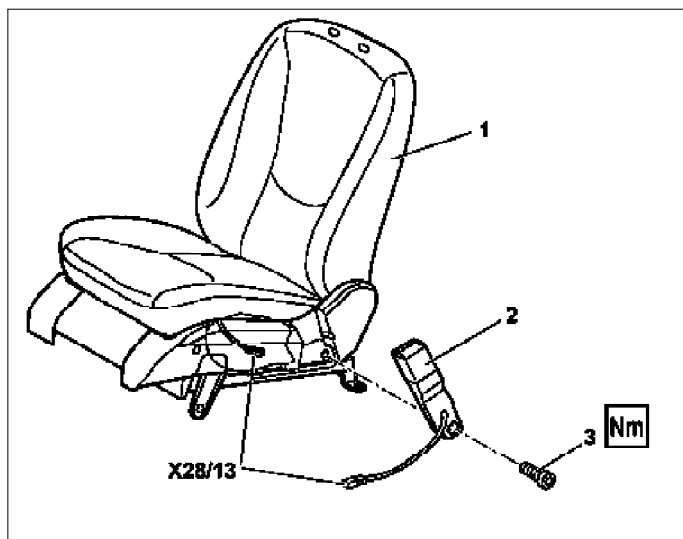


P91.40-0372-11

	Remove/install		
1	Remove front seat (1)		AR91.10-P-1000GH
2	Disconnect seat belt buckle switch connector (X28/13) under front seat (1)		
3	Unscrew internal Torx drive bolt (3) from front seat seat belt buckle (2)	Nm	*BA91.40-P-1007-01D
		Torx bit set	*000589011000
4	Remove front seat seat belt buckle (2)		
5	Install in the reverse order		

Seat belts/emergency tensioning retractors

Number	Designation		Model 163 up to 08/99	Model 163 as of 09/99
BA91.40-P-1007-01D	Bolt of seat belt lock to front seat	Nm	35	35

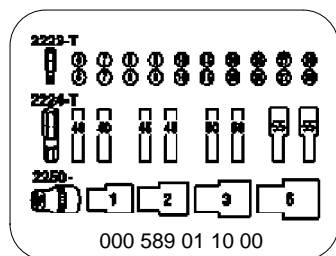

Torx bit set