












**MODEL 163.136 /154 /172 as of 1.9.99,  
163.113 /128 /157 /174 /175  
60% outer rear seat**

- 2 Side covers  
3 Back of rear seat cover  
4 Rear corner rear seat cover  
5 Screw  
6 Rear seat seat belt buckle



P91.40-2174-06

 	Removing, Install		
1	Fold 40 % rear seat downward		See Operating Instructions
2.1	Turn ignition key to "0" position		Only with side airbag in left and right rear, code 293. To avoid fault codes
3	Remove load area floor folding section of 60% rear seat		See Operating Instructions
4.1	Disconnect connector of electrical line of rear seat seat belt buckle and detach from rear seat cushion frame		Only with side airbag in the rear (left and right), code 293.
5	Remove side covers (2)		
6	Unhook rear seat cover on back (3) and rear corner (4)		
7	Unscrew bolt (5) from rear seat seat belt buckle (6)	 	Lift up rear of rear seat cushion and press forwards. *BA91.40-P-1006-01D
8	Remove rear seat seat belt buckle (6) and remove belt end fitting through rear seat cushion		Do not damage rear seat cover!  <b>Installation:</b> Check rear seat seat belt buckle for damage.
9	Remove locking plate, disconnect rear seat seat belt buckle and belt end fitting		<b>Installation:</b> Replace locking plate!
10	Install in the reverse order		

 **Seat belts/emergency tensioning retractors**

Number	Designation	Model
		<b>163 as of 09/99</b>
BA91.40-P-1006-01D	Bolt, belt buckle to rear seat	Nm 45