
AR91.40-P-1516GI F

Remove/install rear seat belt buckle

12.1.00

MODEL 163.136 /154 /172 as of 1.9.99, 163.113 /128 /157 /174 /175 Center seat 60% rear seat

8 Bolt9 Rear seat seat belt buckle

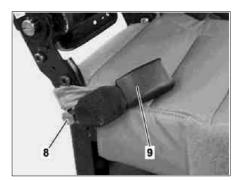

P91.40-2127-01

XX	Remove/install		
1	Fold 40% rear seat into the footwell	i See Operating Instructions	
2	Remove side covers on rear seat seat belt buckle		
3	Unscrew bolt (8) from rear seat seat belt buckle (9)	Nm	*BA91.40-P-1006-01D
4	Remove rear seat seat belt buckle (9)	i Installation: Check rear seat seat belt buckle for damage.	
5	Install in the reverse order		

Nm Seat belts/emergency tensioning retractors

Number	Designation	Model 163 as of 09/99
BA91.40-P-1006-01D	Bolt, belt buckle to rear seat Nm	45