


MODEL 163.136 /154 /172 up to 31.8.99

- 1 Torx socket bolt
- 2 Lap belt end fitting
- 3 Rear seat cover
- 4 Torx socket bolt
- 5 Seat belt buckle

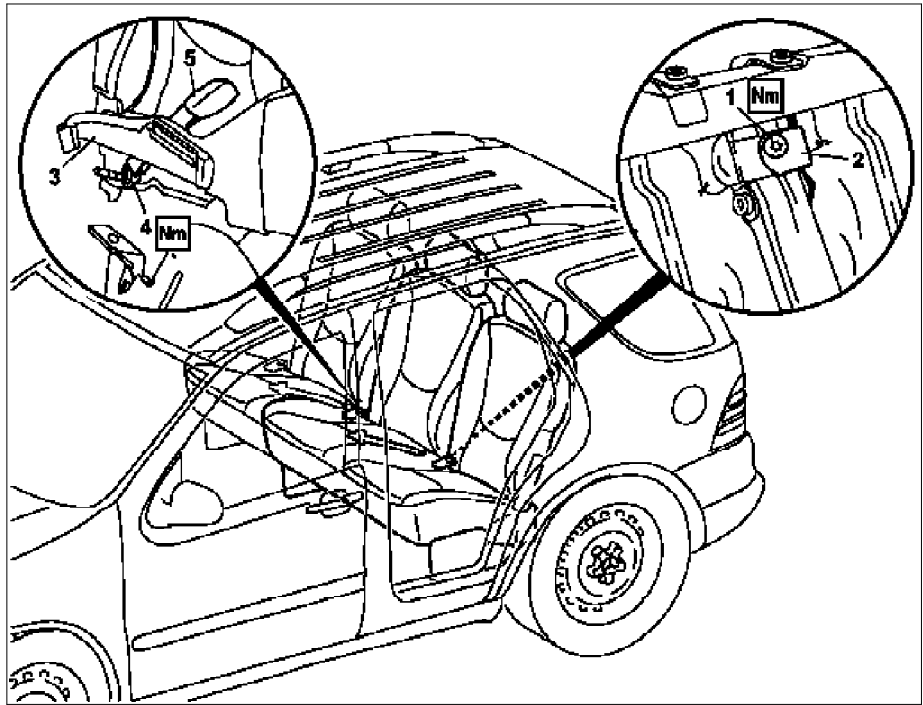

P91.40-0373-06


Operation no. of operation texts or standard texts and flat rates

Sector	Op. no.	Operation text
P	911107	REPLACING SEAT BELT FOR MIDDLE REAR SEAT

	Removing, installing		
1	Fold rear seat backrest forward	See Owner's Manual	
2	Unscrew screw (1) for seat belt end fitting on rear seat	Inner Torx screw for seat belt is fastened to rear bench seat frame. Nm Torx bit set	*BA91.40-P-1001-01D *000589011000
3	Pull lap belt end fitting (2) down and out on rear seat		
4	Pull clip channel for rear seat cover (3) off of right side of seat frame		
5	Remove screw (4) on belt buckle	Nm Torx bit set	*BA91.40-P-1006-01D *000589011000
6	Pull belt buckle (5) down and out	Check seat belt and belt buckle for damage.	
7	Install in the reverse order	Installation: Ensure they are installed free of stress. Do not install seat belt twisted.	

Seat belts/emergency tensioning retractors

Number	Designation		Model 163 up to 08/99	Model 163 as of 09/99
BA91.40-P-1001-01D	Screw on seat belt end fittings	Nm	35	35
BA91.40-P-1006-01D	Bolt of seat belt buckle to rear seat	Nm	35	45

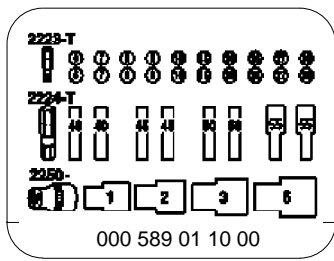

Torx bit set