
















**MODELS 163.136 /154 /172 as of 1.9.99,
163.113 /128 /157 /174 /175
40 % bench seat**

- 1 Bolts, front of rear seat fastening
2 Bolts, rear of rear seat fastening
4 Seat frame covering




P91.12-2126-06

 	Remove, Install		
1	Remove headrest	 See Operating Instructions	
2.1	Remove covering (4) on bottom of rear seat	 On 40 % rear seat only.	AR91.12-P-1100GH
3.1	Disconnect plug to seat belt buckle cable	 Only with side airbag in the rear (left and right), code 293.	
4.1	Remove electric lead attached to seat frame with adhesive tape	 Only with side airbag in the rear (left and right), code 293.  Installation: Replace adhesive tape.	
5	Unscrew bolts (1) on front of rear seat fastening	 Installation: Replace bolts and nuts with locking agent applied.  Torx bit set 	*000589011000 *BA91.12-P-1005-03A
6	Release backrest and tip forward	 See Operating Instructions	
7	Release seat bench and fold down	 See Operating Instructions	
8	Remove bolts (2) on rear of rear seat fastening	 Installation: Replace bolts and nuts with locking agent applied.  Torx bit set 	*000589011000 *BA91.12-P-1005-03A
9	Remove 40 % bench		
10	Install in the reverse order		

 **Rear seats**

Number	Designation	Model 163 as of 09/99
BA91.12-P-1005-03A	Nuts for rear seat console on vehicle floor	NM 40

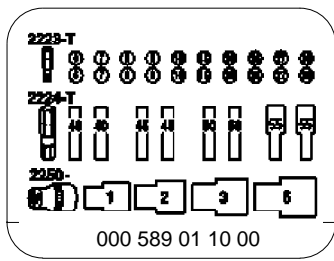

Torx bit set