


MODEL 163.113 /128 /136 /154 /157 /172 /174 /175

- 1 Belt end fitting for third seat row
 2 Cargo retainers
 3 Floor mat

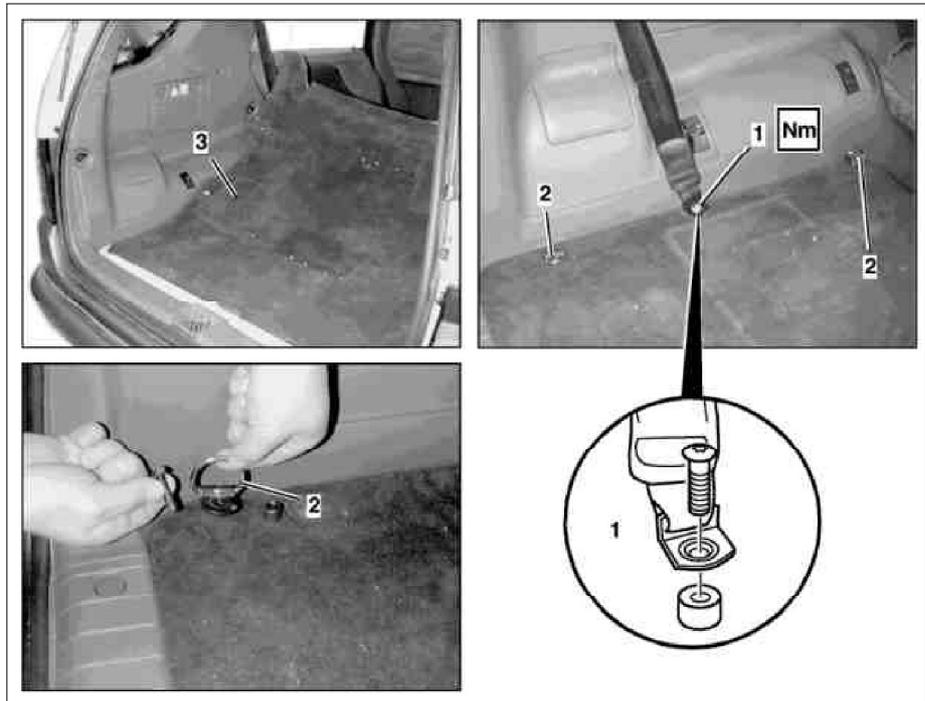

P68.20-0456-06

 	Remove/install		
	Torx bit set		*000589011000
1.1	Remove inner spare wheel together with cover	Only model 163.174.	AR68.30-P-4610GH
2.1	Fold third seat row upward	Only with 3rd seat row, code 847.  See owner's manual	
3	Remove load compartment floor flaps	 See owner's manual	
4.1	Remove seat belt end fitting for third seat row (1)	Only with 3rd seat row, code 847. 	*BA91.40-P-1001-01D
5	Unscrew screws for load retainer (2)		*BA68.50-P-1001-02A
6.1	Remove mount for child seat retainer	 If installed 	*BA91.20-P-1001-01A
7	Remove cover for rear edge of load compartment	 Do not scratch cover when removing caps.  Installation: Properly install seal on rear-end door.	
8	Remove floor covering (3) to rear	 Installation: Install floor covering below side paneling.  Assembly wedge	*110589035900
9	Install in the reverse order		

 Safety belts/emergency tensioning retractors


Number	Designation		Model 163 up to 08/99	Model 163 as of 09/99
BA91.40-P-1001-01D	Belt end fitting screw	Nm	35	35

 Luggage nets


Number	Designation		Model Series 163
BA68.50-P-1001-02A	Bolt securing cargo retainer bracket to loading compartment floor	Nm	24

Nm Child seats

Number	Designation		Model Series 163
BA91.20-P-1001-01A	Bracket for child seat anchorage on load compartment floor	Nm	24

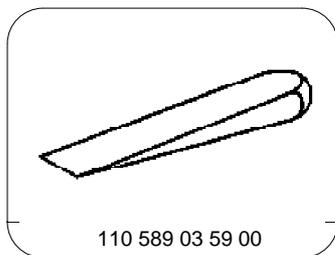

Assembly wedge

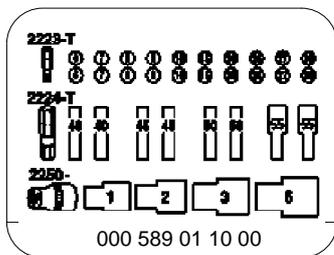

Torx bit set