



MODEL 163.113 /136 /154 /172 /174

- 2 Anchor mounting plate
- 3 Long spacer
- 4 Short spacer
- 5 Trim plate
- 6 Anchor ring
- 7 Long bolt
- 8 Short bolt
- 9 Trim cover

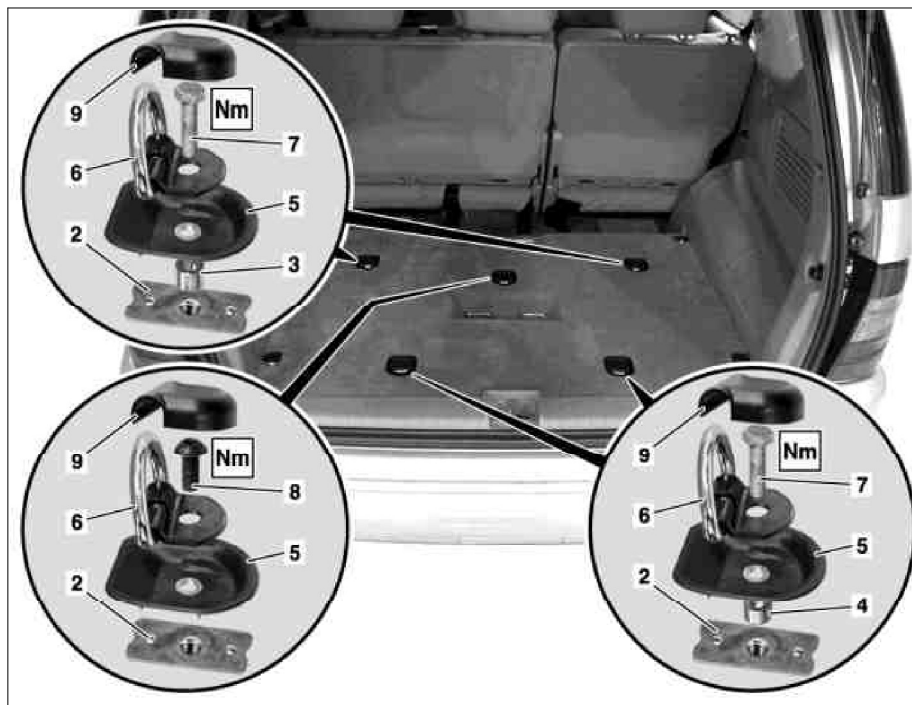

P91.20-2039-06

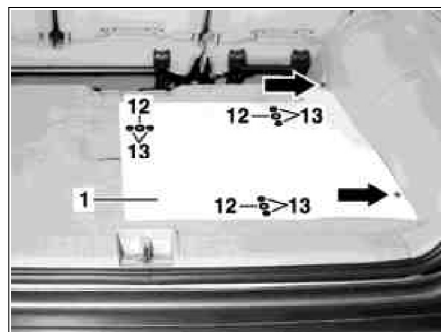


P91.20-2040-01

- 1 Template
- 12 Bolt location for mounting plate
- 13 Rivet locations for mounting plate




Hole in carpet, Ø=57 mm

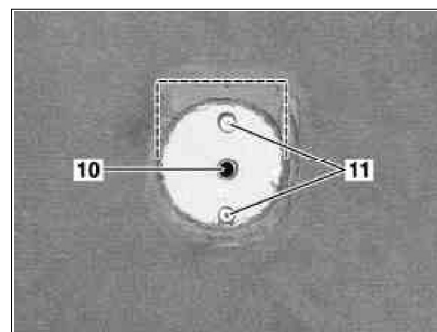- 10 Center hole for anchor ring, Ø=9.5 mm
- 11 Hole for rivet, Ø=4 mm





P91.20-2038-01

| | | | |
|----|--|---|---------------------|
| | Removing | | |
| 1 | Remove compact spare tire | See Owner's Manual. | |
| 2 | Fold 3rd row seats to storage position | Only with code (847). See Owner's Manual. | |
| 3 | Remove footwell covers | See Owner's Manual. | |
| 4 | Remove cargo anchor rings | | |
| | Modifying | | |
| 5 | Place template (1) on top of load compartment floor covering and secure with cargo anchor bolts (arrows) | Turn template over for opposite side. Template | *163589066300 |
| 6 | Mark floor covering through center of bolt location (12) for anchor mounting plate (2) | Only for those positions at which anchor rings will be installed. | |
| 7 | Remove template (1) | | |
| 8 | Remove load compartment floor covering | | AR68.20-P-4810GH |
| 9 | Place floor covering faceup on suitable surface | | |
| 10 | Using hole saw, create Ø=57 mm hole for anchor ring assembly | Only for those positions at which anchor rings will be installed. Secure floor covering appropriately to ensure hole is cut cleanly. Use mark as a guide for center of hole. | |
| 11 | Lower rear axle carrier | Only Model 163.174 for installation of 2nd row center anchor ring. | AR35.10-P-0020-01GH |
| 12 | Place template (1) on floor pan and secure with cargo anchor bolts | | |

| | | | |
|---|---|---|--------------------------------------|
| 13 | Mark floor pan through center of rivet and bolt locations (12, 13) for anchor mounting plate (2) | ⚠ Only for those positions at which anchor rings will be installed. | |
| 14 | Remove template (1) | | |
| 15 | At marks, drill $\varnothing=9.5$ mm hole (10) for anchor bolt and $\varnothing=4$ mm holes (11) for rivets | ⚠ Model 163.174: To avoid damaging auxiliary fuel tank, do not drill more than 5mm through floor pan for 2nd row center anchor ring. | |
| 16 | Smooth rough edges of holes on underside of floor pan | | |
| 17 | Clean, prime, and paint holes | | |
| 18 | Using an assistant, place mounting plate (2) into position from underneath vehicle and secure with bolt (8) | i Plate should be flush with surface of body. | |
| 19 | Rivet plate into position from inside vehicle, then remove bolt (8) | | |
| 20 | Seal underbody at plate location | Body seam sealant | *BR00.45-Z-1004-01A |
|  | Installing | | |
| 21 f | Install load compartment floor covering | i Do NOT install internal spare on Model 163.174 at this time. | AR68.20-P-4810GH |
| 22 | Loosely install trim plate (5) to observe fit to floor covering | i Straight edge of plate (5) towards front of vehicle. | |
| 23 | Remove trim plate (5) and relieve floor covering so that plate, when installed, is completely flush with floor covering | ⚠ Use caution to avoid making hole too large for trim plate to cover hole completely. Square off hole at front. Relieve only down to foam. | |
| 24 | Install anchor ring (6) and related components | ⚠ Use short spacer (4) on 3rd row rings. Use long spacer (3) on 2nd row outboard rings. Use short bolt (8) and no spacer on 2nd row center ring.  Torx bit set  | *000589011000 *BA68.50-P-1001-02A |
| 25 f | Reinstall rear axle carrier | i Model 163.174 only. | AR35.10-P-0020-01GH |
| 26 f | Reinstall internal spare tire and carrier | i Model 163.174 only. | AR68.30-P-4610GH |
| 27 | Reinstall compact spare tire | i See Owner's Manual. | |

Luggage nets

| Number | Designation | | Model 163 |
|--------------------|---|----|-----------|
| BA68.50-P-1001-02A | Screw for cargo anchoring mount on load compartment floor | Nm | 24 |

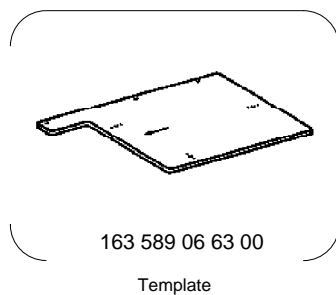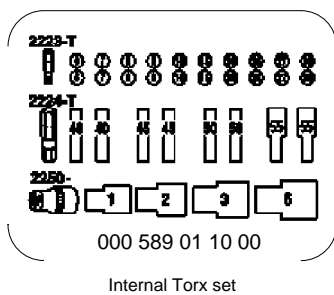

Repair products

| Number | Designation | Order number |
|--------------------|---|---------------|
| BR00.45-Z-1004-01A | MB body sealant for sealing seams (can be painted over/310 ml tube) | 001 989 63 20 |

Parts ordering notes

| Part no. | Designation | Quantity |
|--------------------|---|-----------|
| 163 868 01 30 7C45 | Trim cover | as needed |
| 163 984 10 29 | Short bolt (SAE) (for 2nd row center anchor ring only) | as needed |
| 210 990 07 01 | Long bolt (SAE) | as needed |
| 000000 001427 | Short bolt (metric) (for 2nd row center anchor ring only) | as needed |
| 000000 001388 | Long bolt (metric) | as needed |
| 163 860 03 14 9051 | Anchor ring | as needed |
| 163 680 05 17 | Trim plate | as needed |
| 357 991 14 40 | Short spacer (for 3rd row anchor rings only) | as needed |
| 126 991 15 40 | Long spacer (for 2nd row anchor rings, except center, only) | as needed |
| 910002 004105 | Rivet | as needed |
| 124 984 04 25 | Anchor mounting plate (SAE) | as needed |
| 124 984 05 25 | Anchor mounting plate (metric) | as needed |