


## MODEL 163.174

- 1 Spare wheel cover front section
- 2 Retaining straps
- 3 Electric air pump
- 4 Screws
- 5 Spare wheel mount
- 6 Bracket
- 7 Screws

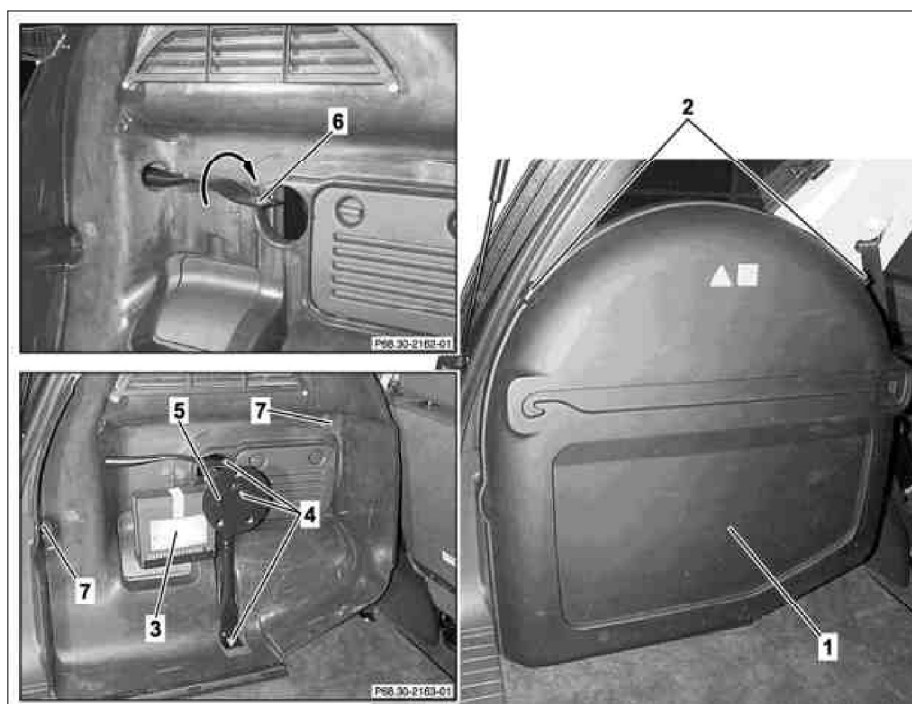

P68.30-2161-06

	Removal, installation		
1	Remove cargo space cover		See Owner's Manual.
2	Loosen retaining straps (2) and remove spare wheel cover front section (1)		
3	Remove spare wheel		*BA40.10-P-1002-01A
4	Remove electric air pump (3)		
5	Unscrew screws (4) and remove spare wheel mount (5)		
6	Remove bracket (6)		Turn in clockwise direction until bracket (6) releases at D-pillar.
7	Remove rear wall on spare wheel cover		2 screws.
8	Install in opposite order		

## Wheels

Number	Designation	Model
		163.174
BA40.10-P-1002-01A	Bolt for spare wheel on inside of spare wheel mount	Nm 50