

P83.30-0806-09

Location of components in passenger compartment


1 Temperature selector wheel
 B10/4 In-car temperature sensor with aspirator blower
 M16/8 Blending air flap actuator motor

M39 Fresh and recirculated air actuator
 R14 Blower motor series resistor group
 R35 Icing protection temperature sensor
 S98 Heating/AAC switch

Location of components in passenger compartment

1 Heater / AAC switch
 2 Cover
 3 AC housing
 4 Screw
 5 Plug connection


N19 AAC control unit

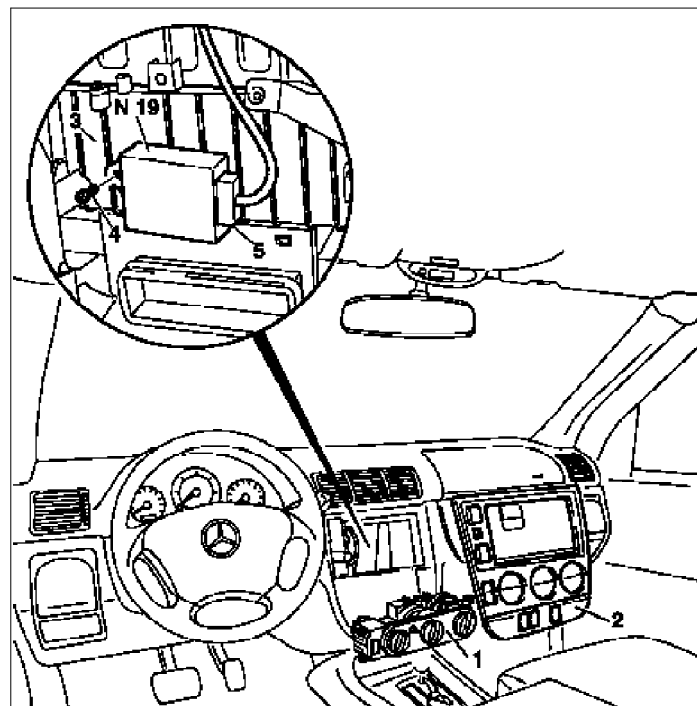

P83.30-0752-12

Location of components in passenger compartment as of 12/99


- M9* In-car temperature sensor aspirator blower
- B10/5* Outside temperature sensor
- B10/5x1* Outside temperature sensor connector

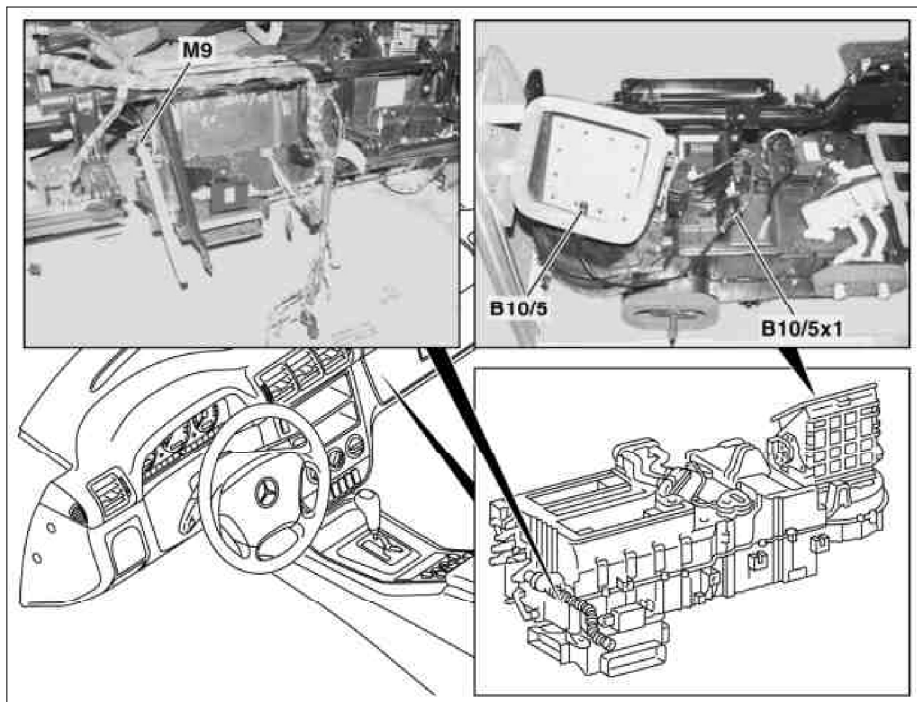

P83.30-3353-06

Location of components in engine compartment

- M4* Additional fan
- M4x1* Additional fan connector
- M13* Hot-water recirculation pump
- N10* All-activity module

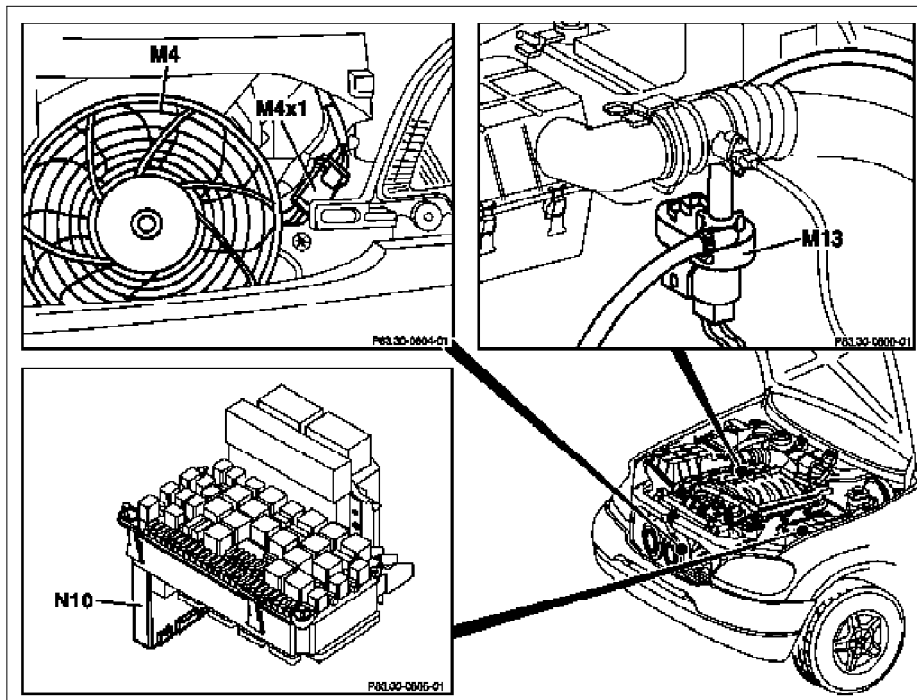


P83.30-0803-06

Location of components, refrigeration technology part up to 11/99

- 1 Expansion valve
- 2 Evaporator
- 3 Suction pipe
- 4 Pressure line
- 5 Pressure line
- 6 Fluid reservoir
- 7 Capacitor
- 8 Pressure line

- A Manifold air pressure connection
- B High pressure connection
- A9 AC compressor
- B12 Refrigerant pressure sensor

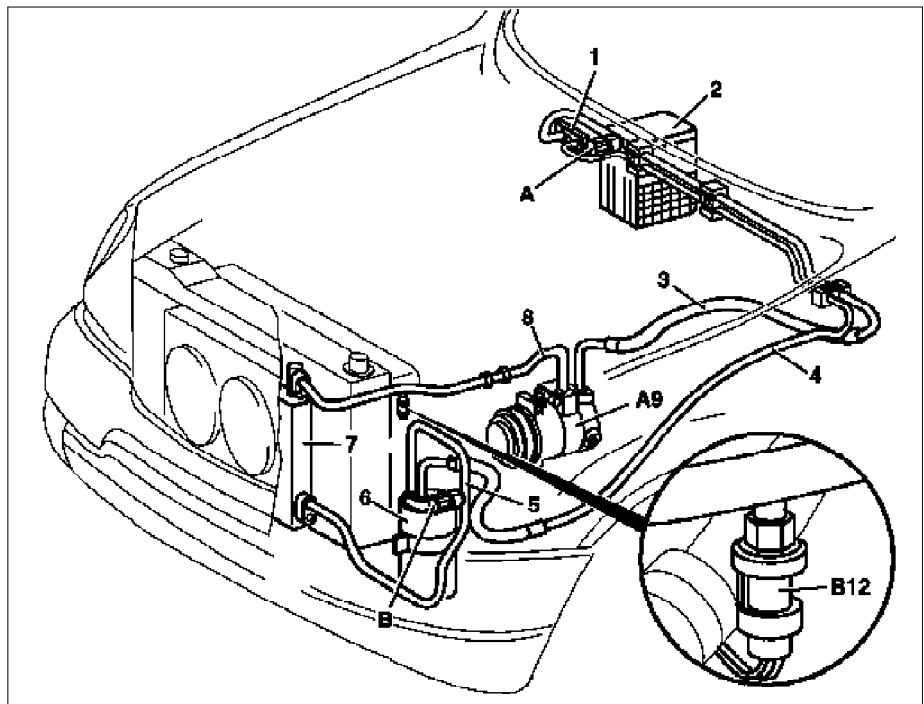


P83.30-0784-06

Location of components, refrigeration technology part up to 12/99

- 1 Expansion valve
- 2 Evaporator
- 3 Suction pipe
- 4 Pressure line
- 5 Pressure line
- 6 Fluid reservoir
- 7 Capacitor
- 8 Pressure line

- A Manifold air pressure connection
- B High pressure connection
- A9 AC compressor
- B12 Refrigerant pressure sensor
- M4/7 Electric suction fan engine and AC with integrated control
- N76 Engine and air conditioning electric suction fan control unit

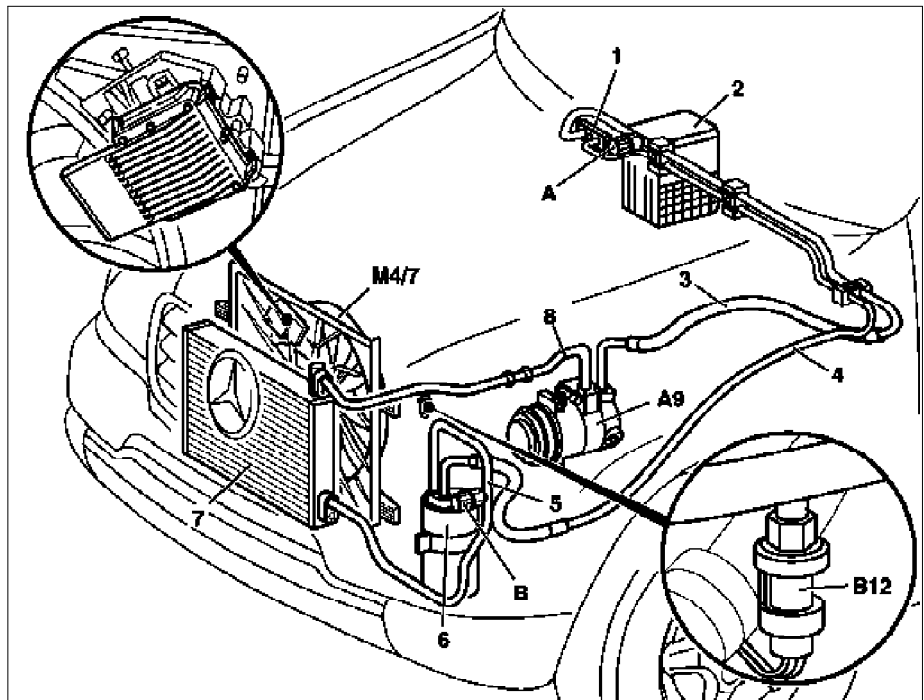

P83.30-3356-06